

INSIDE

 
SZUFLADA WYSOKA

40





60









80









ZESTAWIENIE AKCESORIÓW NIEZBEDNYCH DO MONTAŻU

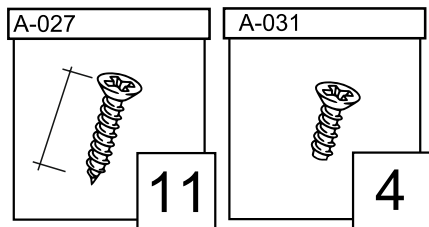


                     Niektóre akcesoria pakowane są po kilka sztuk więcej niż wynika to z zestawienia.
Podczas montażu prosimy postępować zgodnie z instrukcją.

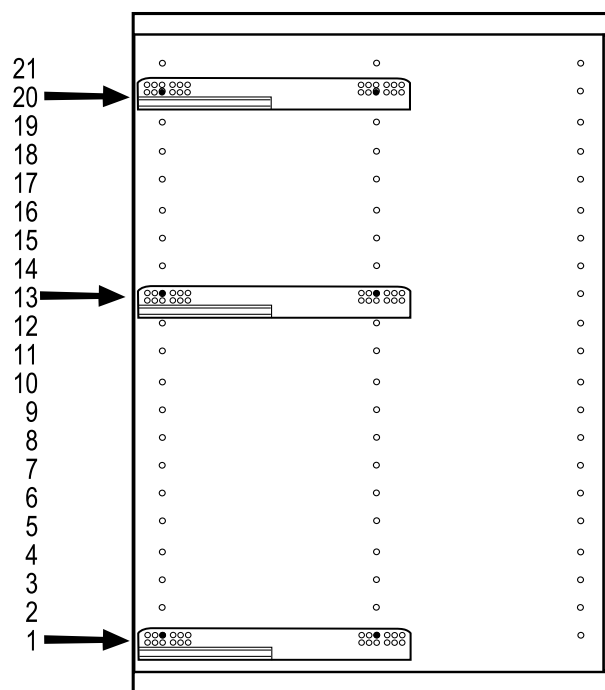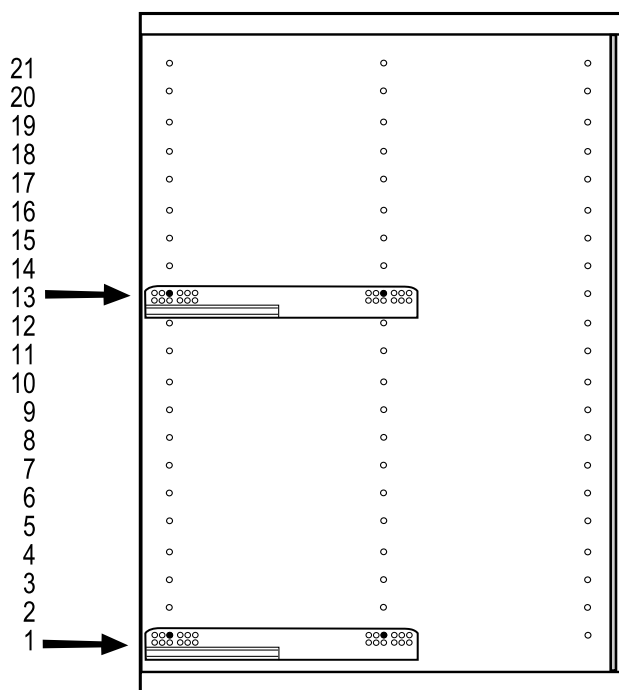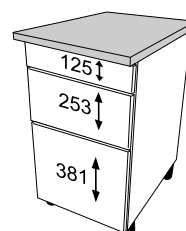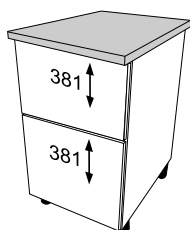


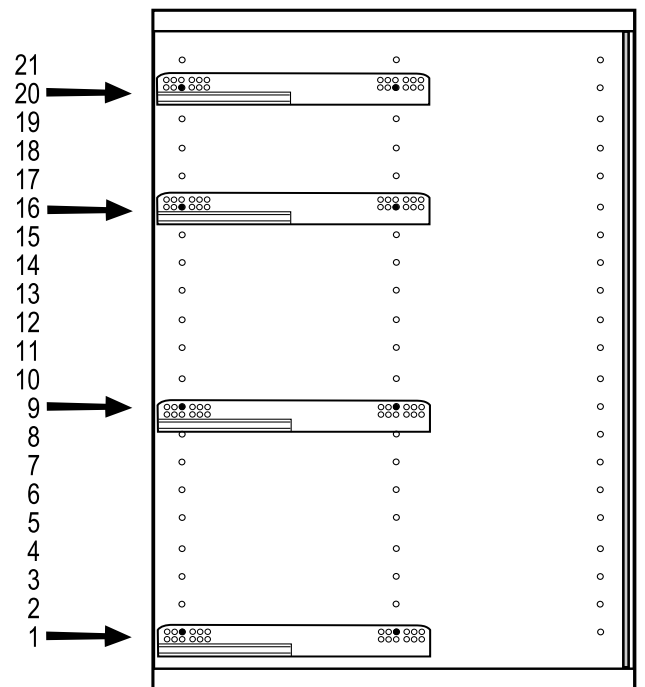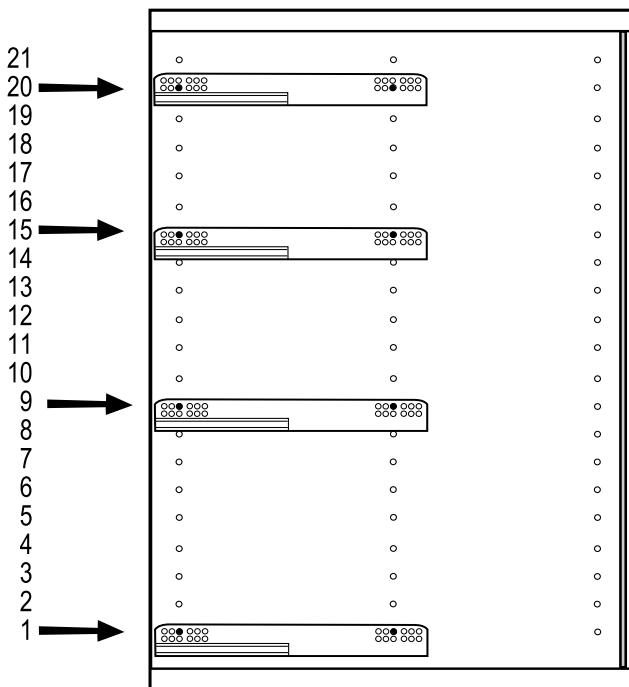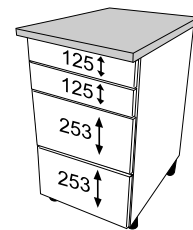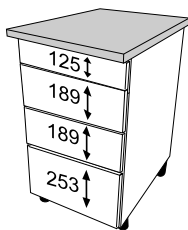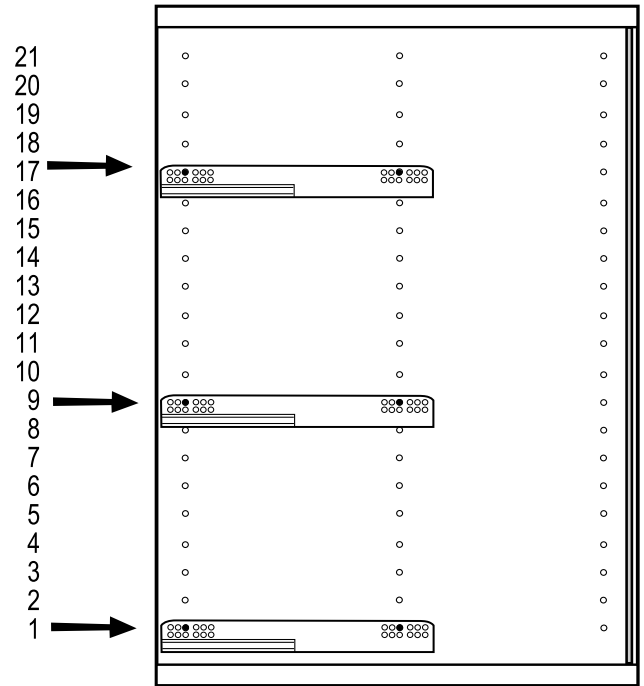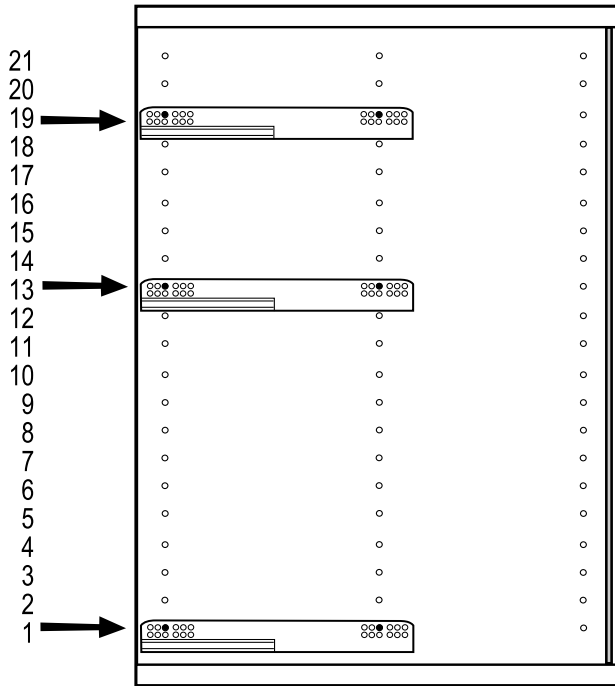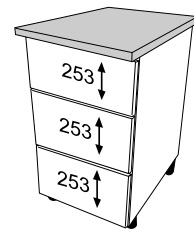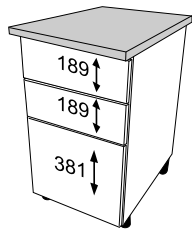

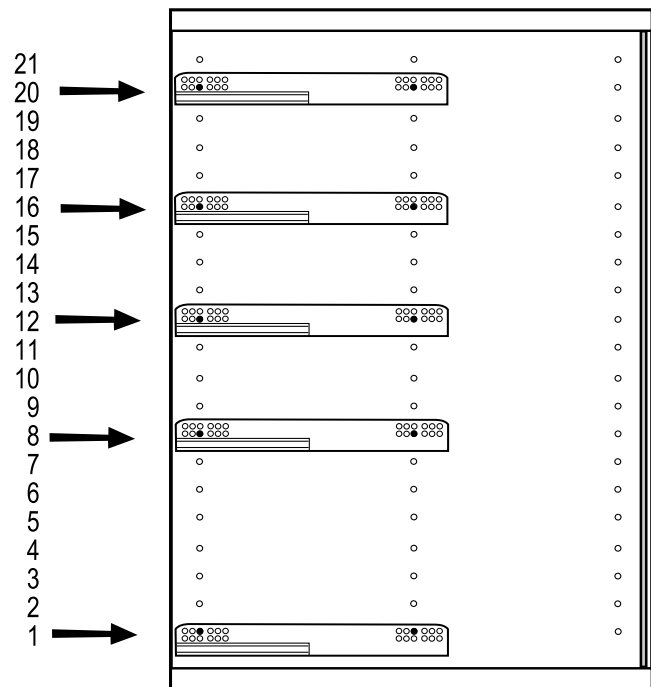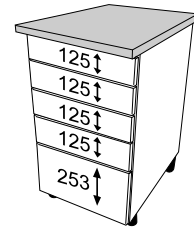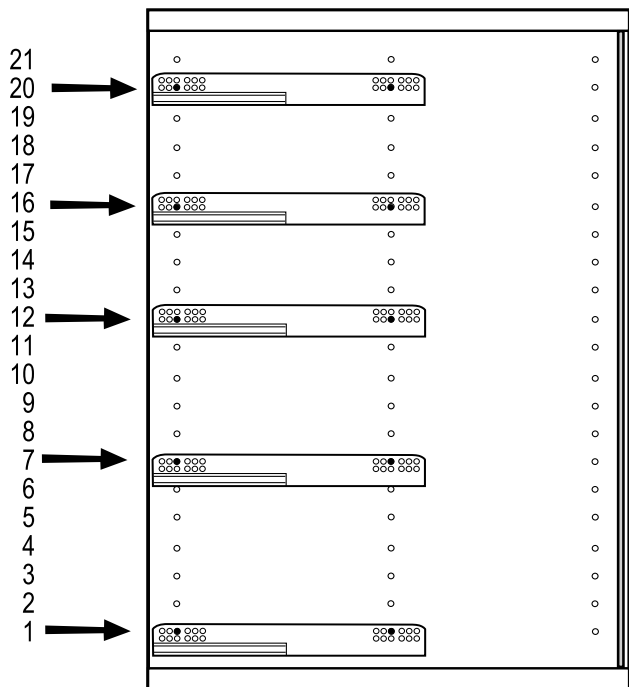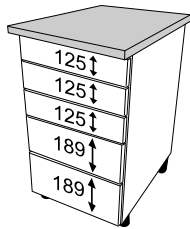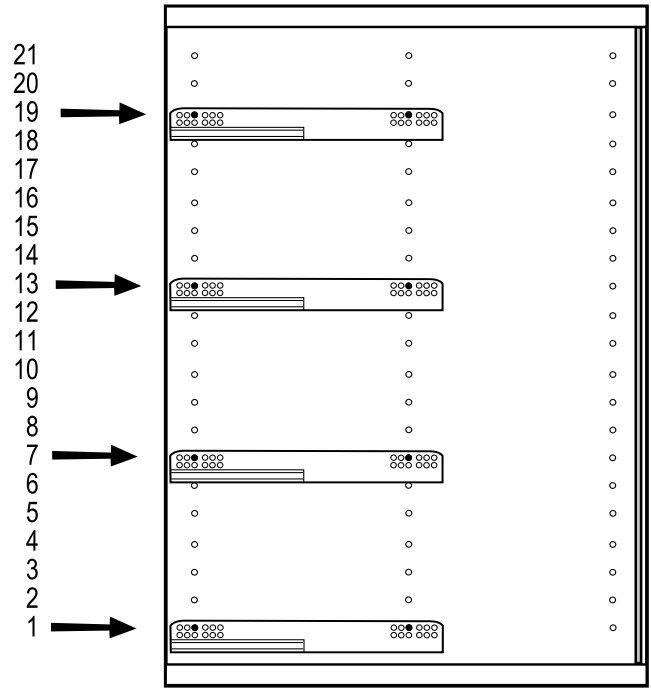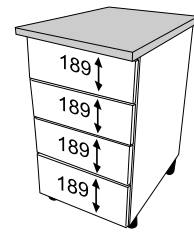
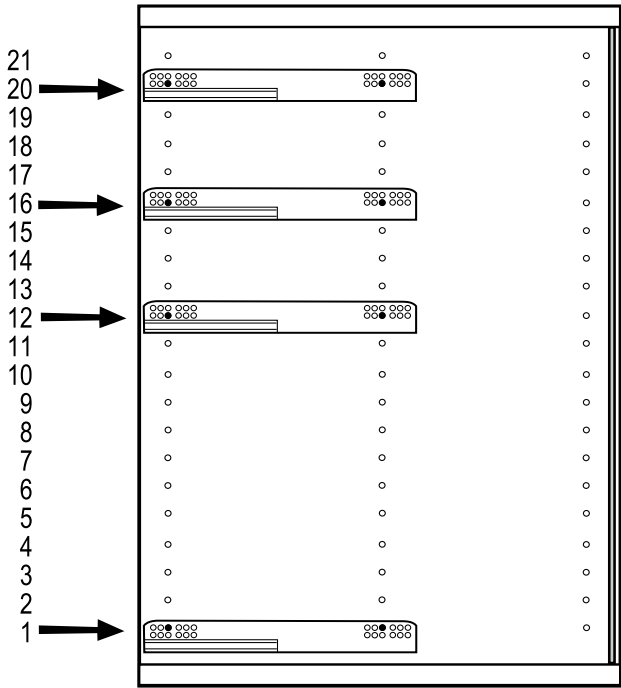
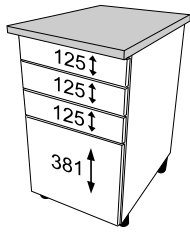


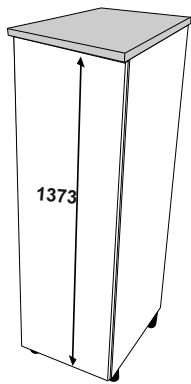

 
- 40
- 39
- 38
- 37
- 36
- 35
- 34
- 33
- 32
- 31
- 30
- 29
- 28
- 27
- 26
- 25
- 24
- 23
- 22
- 21
- 20
- 19
- 18
- 17
- 16
- 15
- 14
- 13
- 12
- 11
- 10
- 9
- 8
- 7
- 6
- 5
- 4
- 3
- 2
- 1

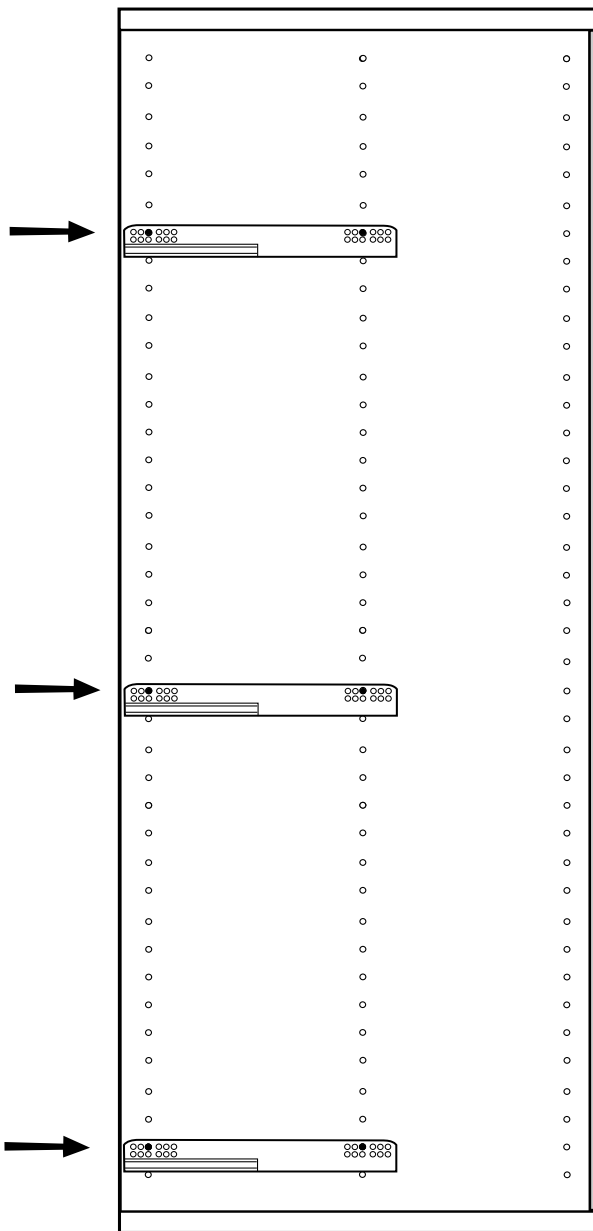


1

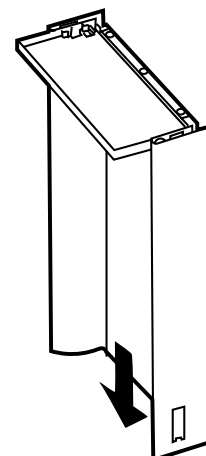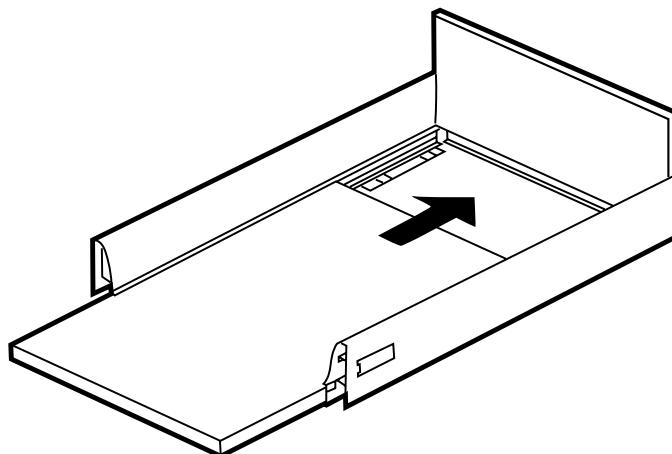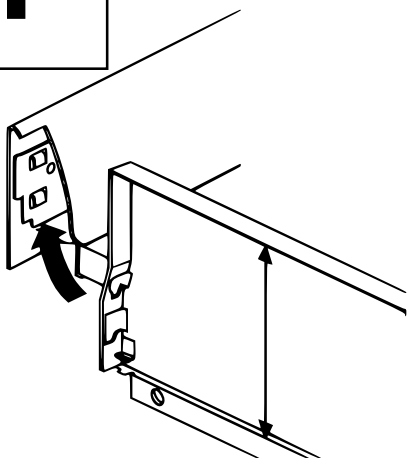   


2

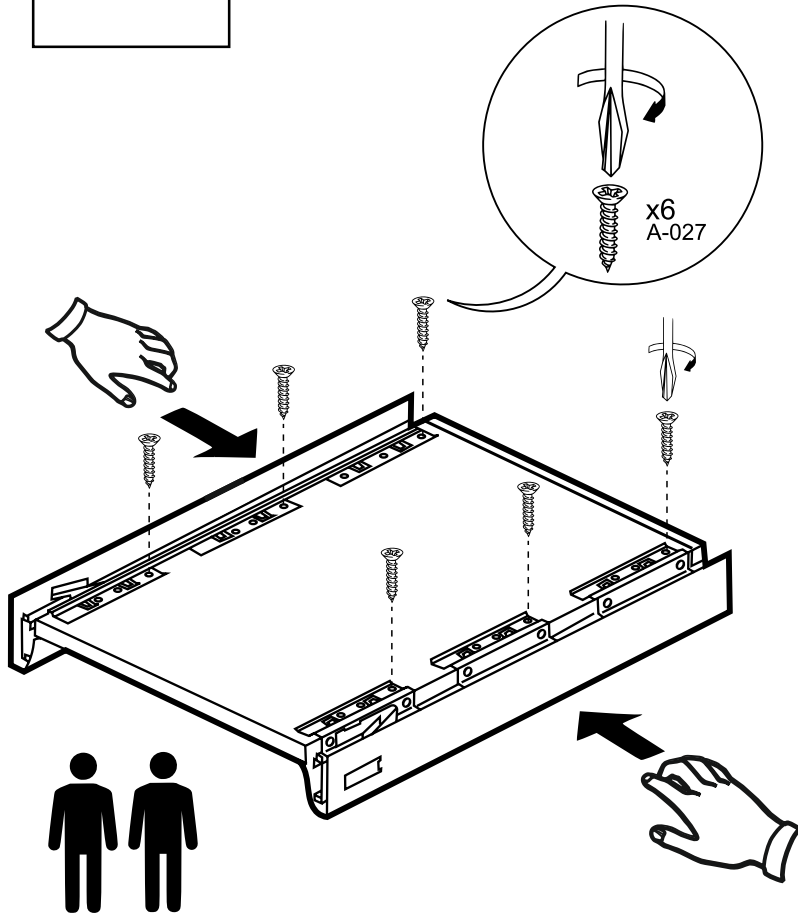 



60 cm
40 cm

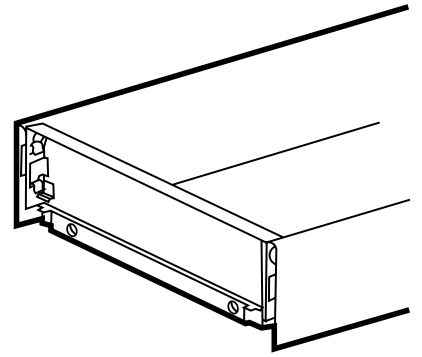 


80 cm

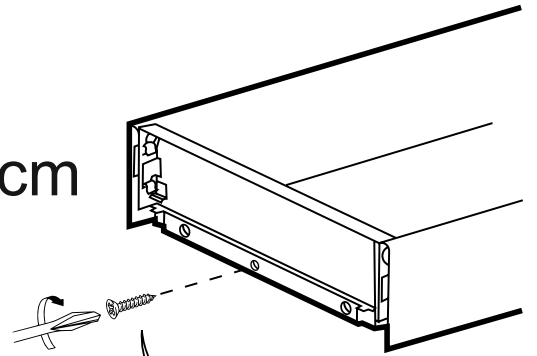 


3

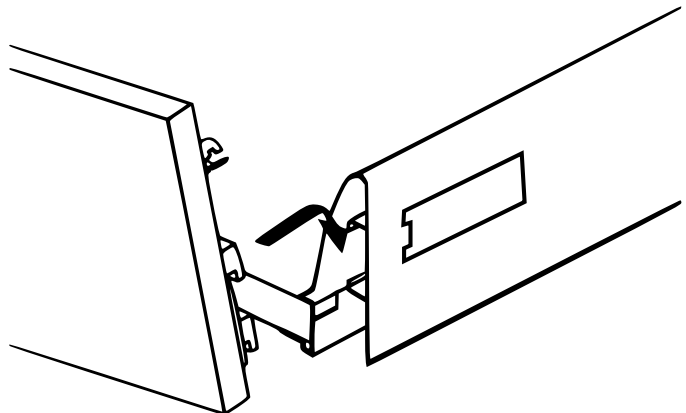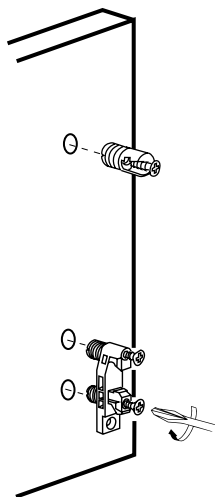  


4

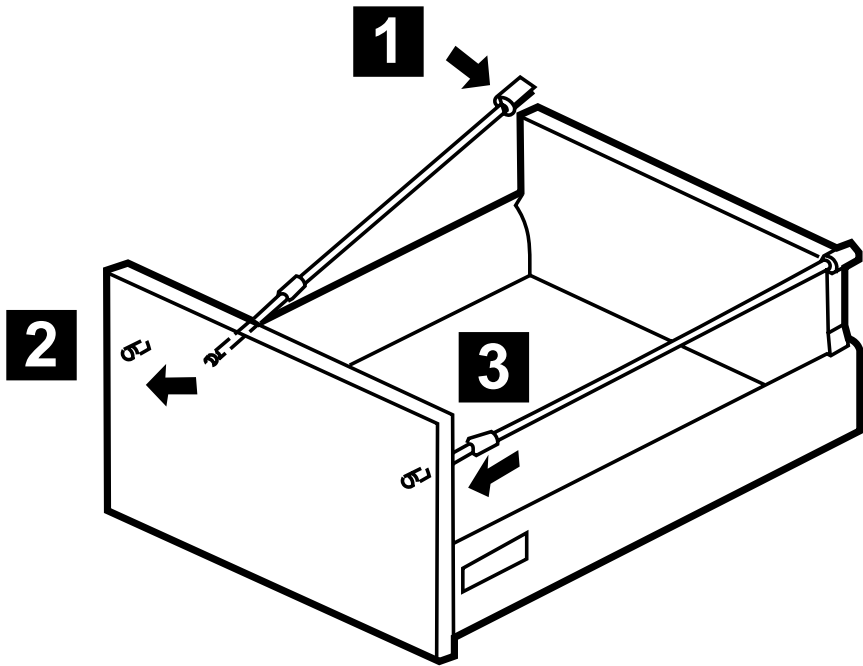 

5

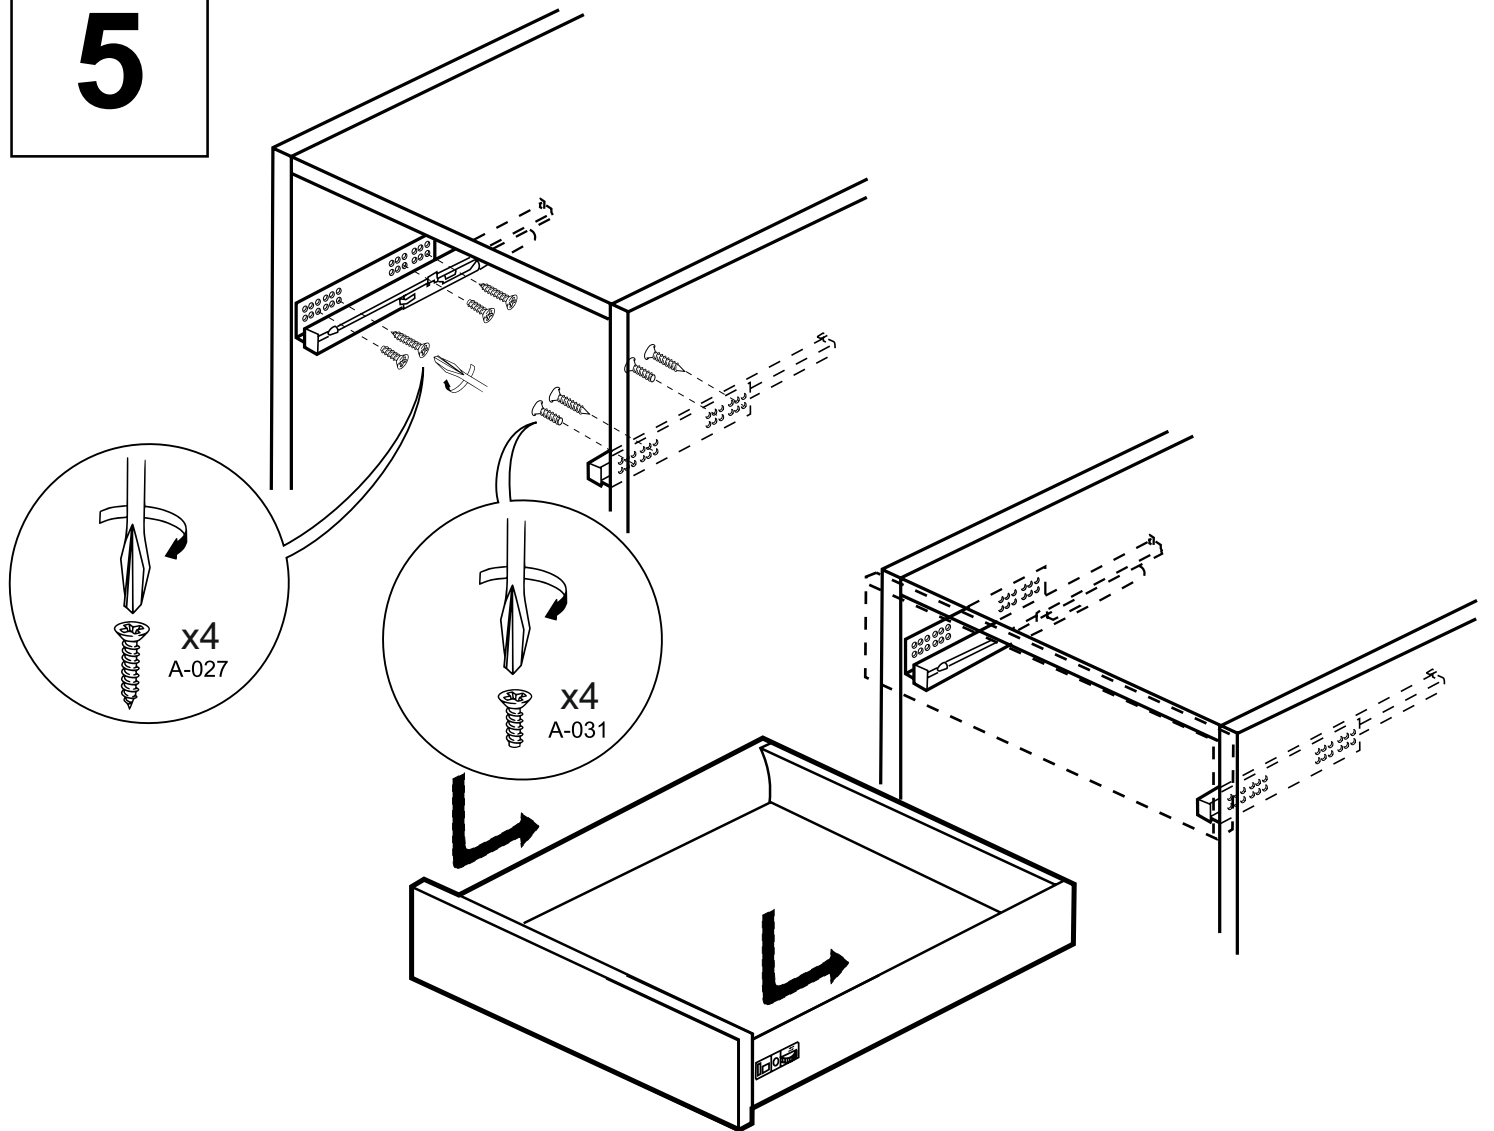 

6

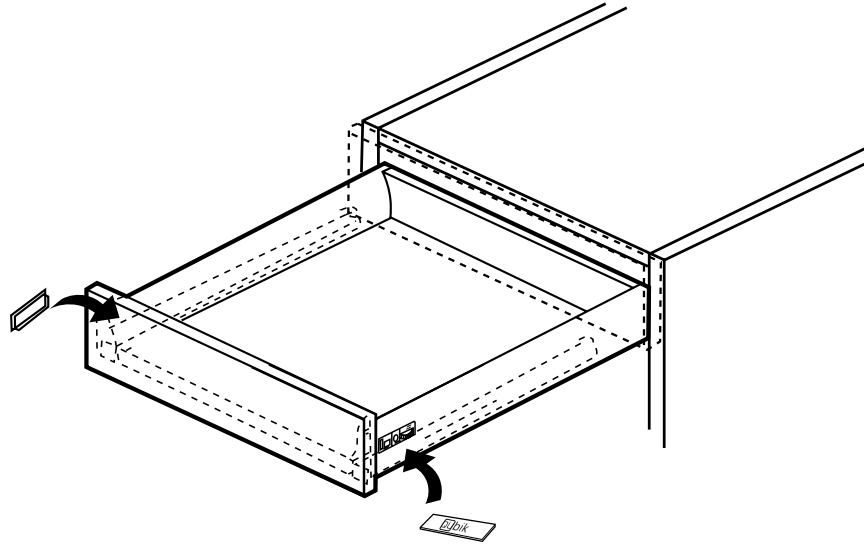 

7

