

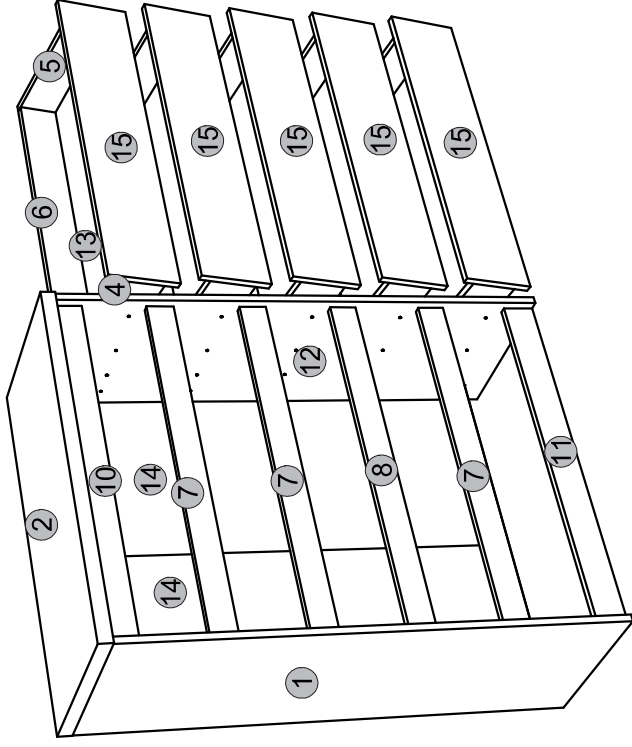
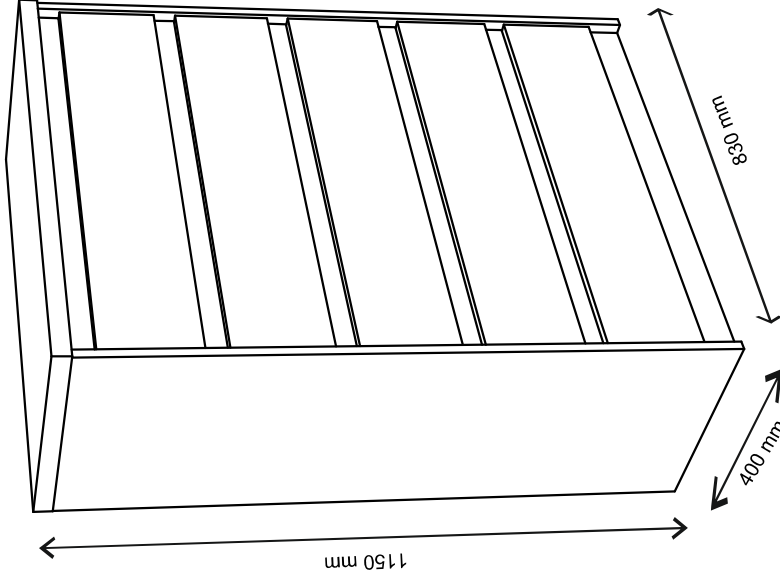
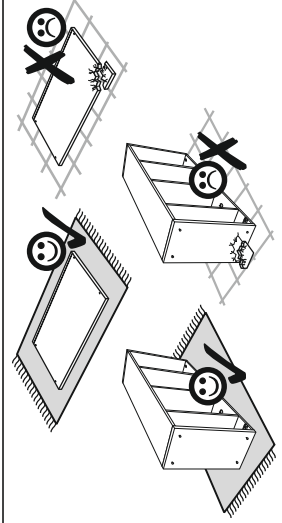
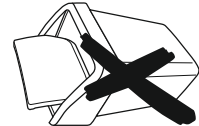
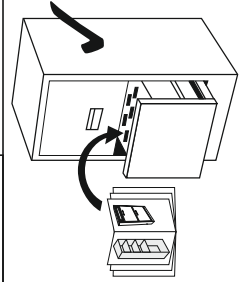
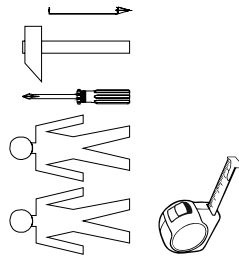
 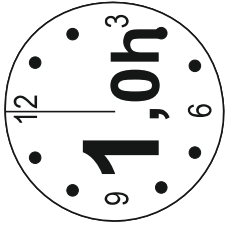
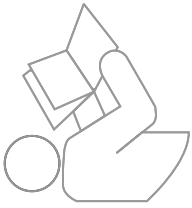


Instalation manual


LAHTI: KOM_5S_80




Element symbol	Dimensions					Code	Package
	1	2	3	4	5		
1	1108	395	16	1	L-108	1/1	
2	830	400	16	1	L-203	1/1	
3	334	60	16	5	L-409	1/1	
4	350	110	16	5	L-501	1/1	
5	350	110	16	5	L-502	1/1	
6	739	110	16	5	L-505	1/1	
7	796	60	16	3	L-410	1/1	
8	796	60	16	1	L-411	1/1	
9	796	60	16	1	L-412	1/1	
10	796	60	16	1	L-413	1/1	
11	796	70	16	1	L-414	1/1	
12	1108	395	16	1	L-109	1/1	
13	755	350	3	5	L-606	1/1	
14	1083	407	3	2	L-607	1/1	
15	790	170	16	5	L-006	2/2	

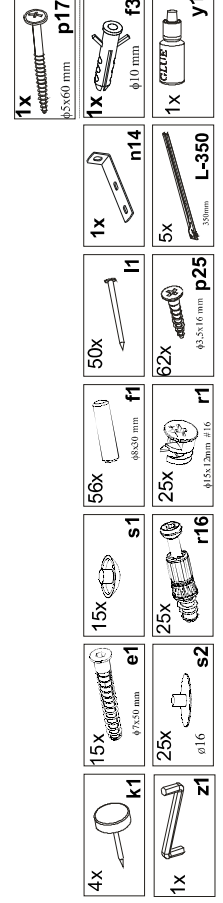


1

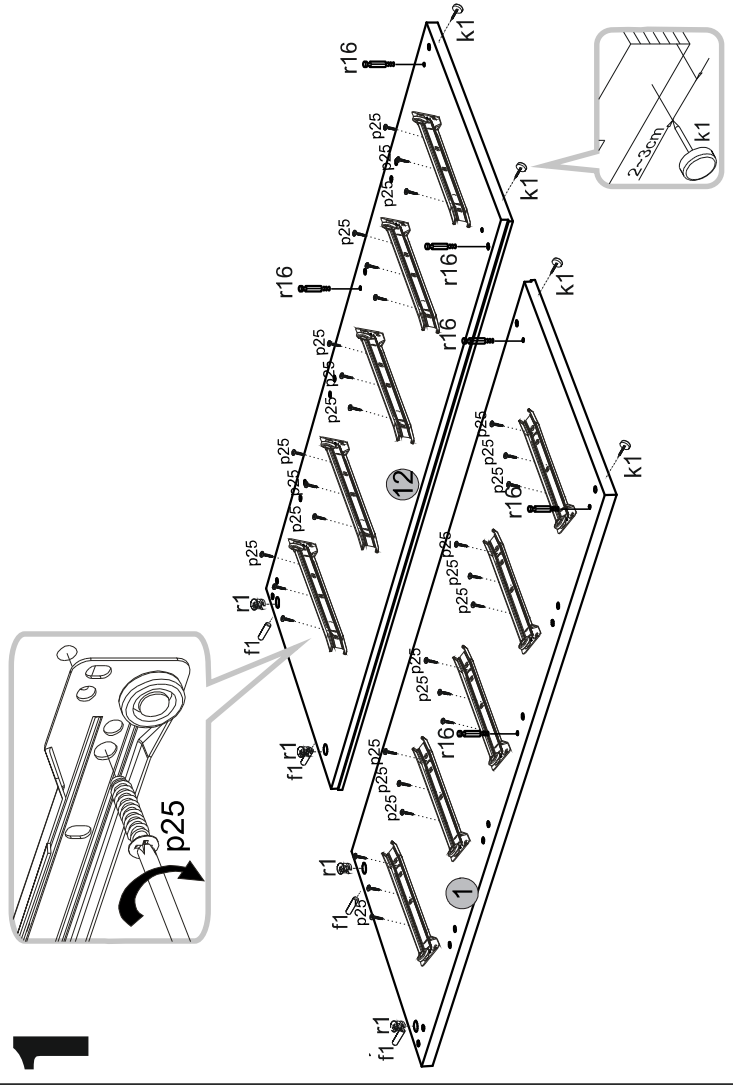


3

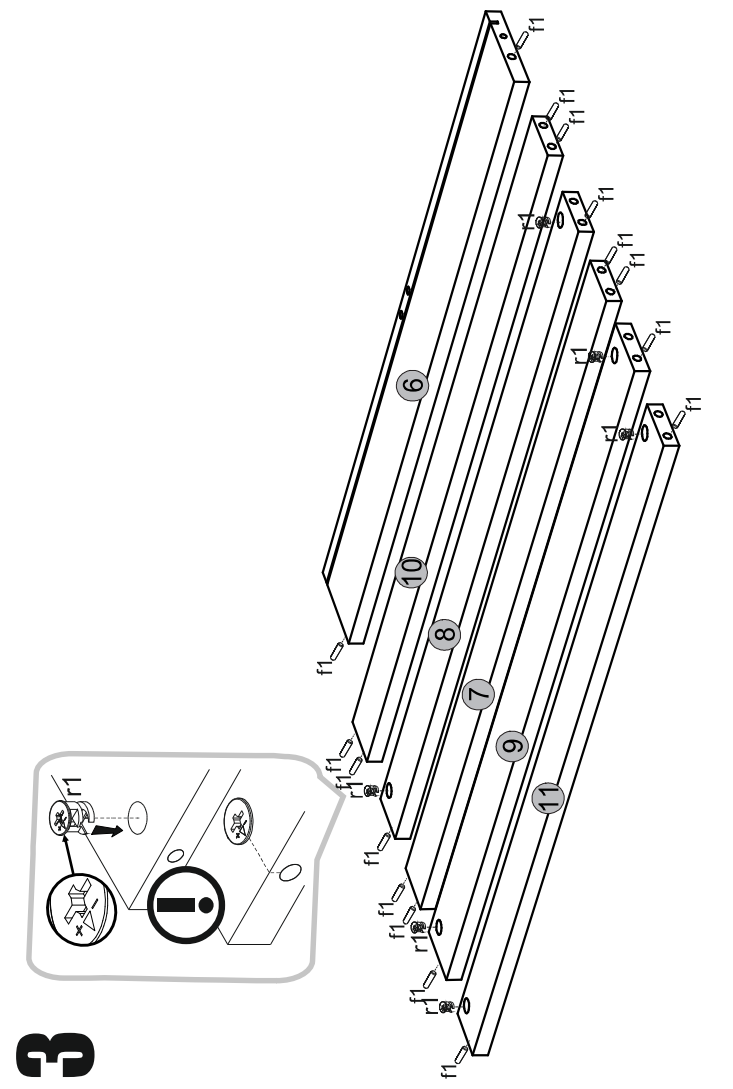



2

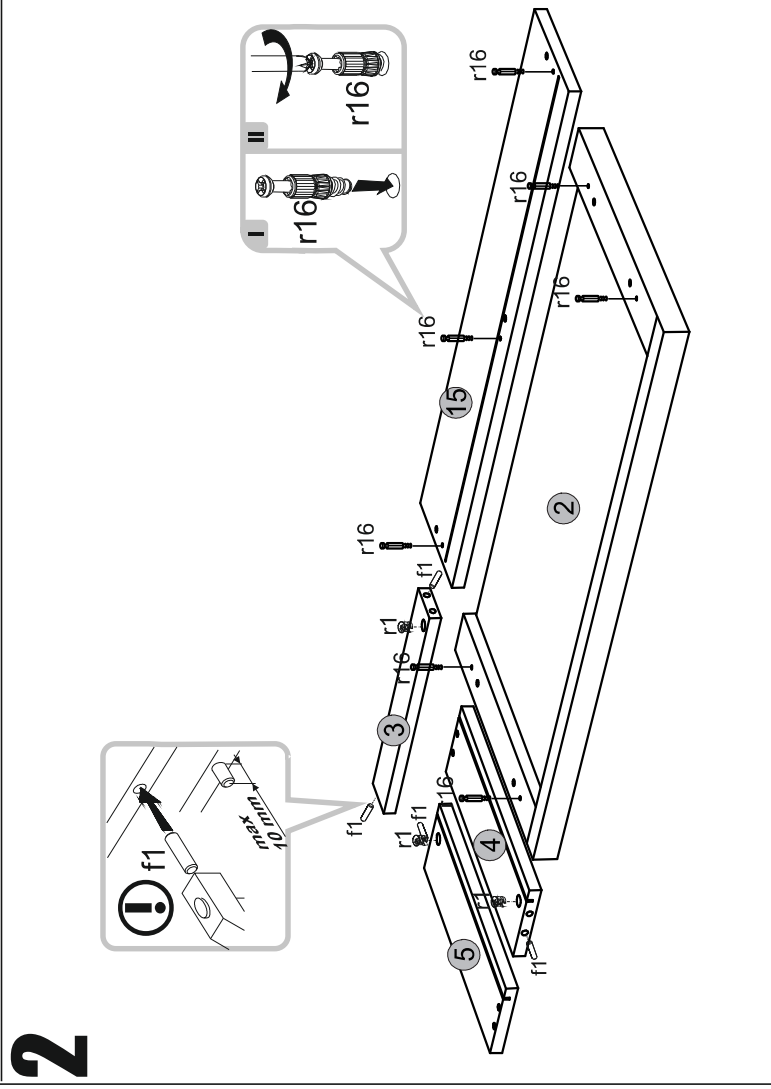

4

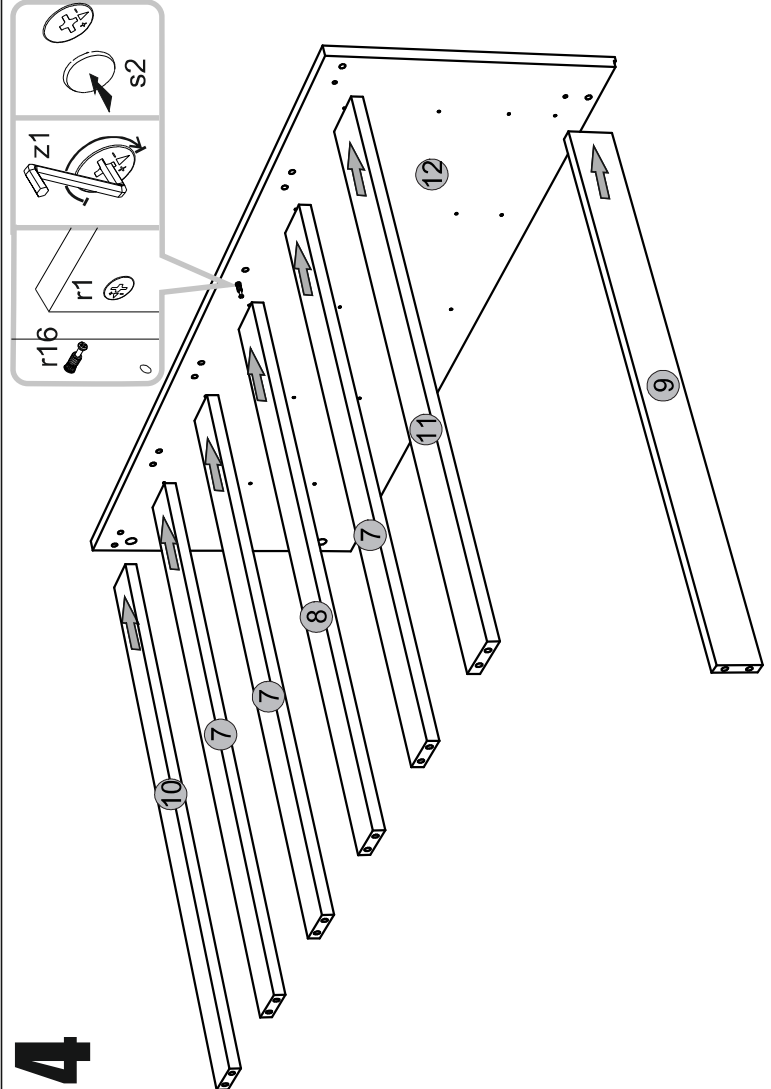

5

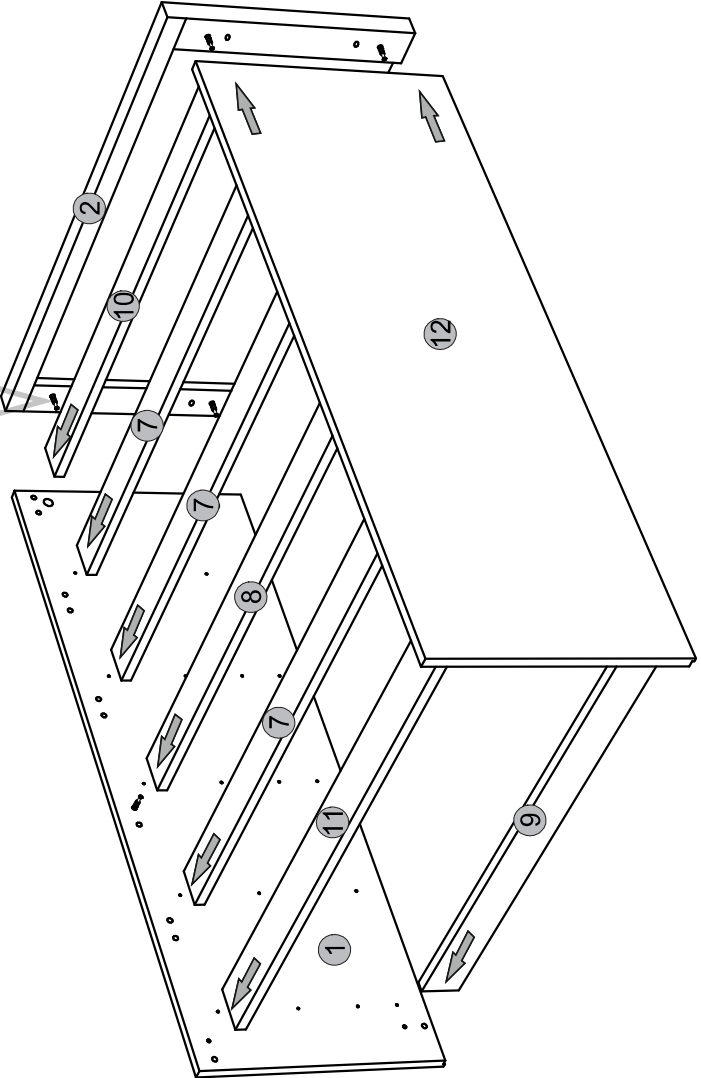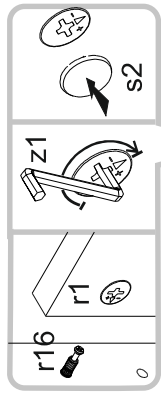

6

! $a=b$

