

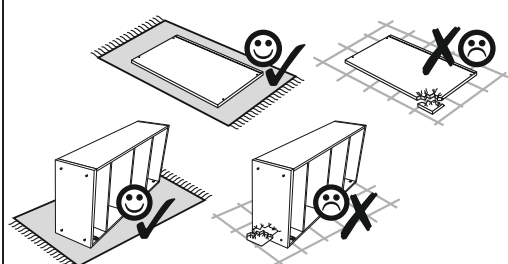
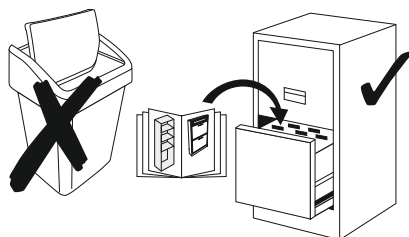
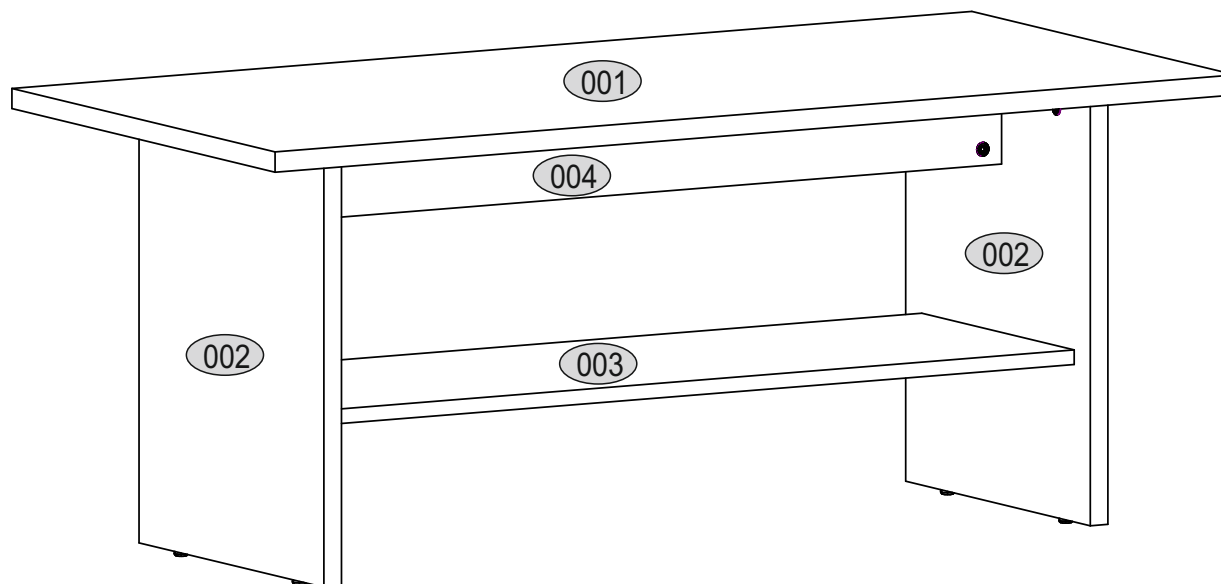
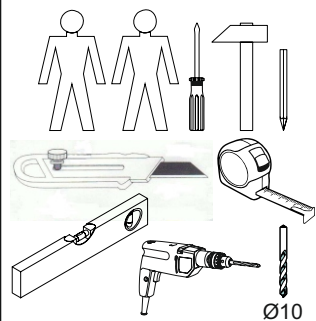


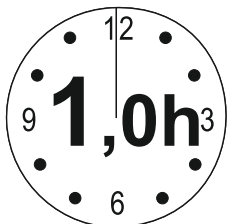


Installation manual

ERDEN: LAWA 120






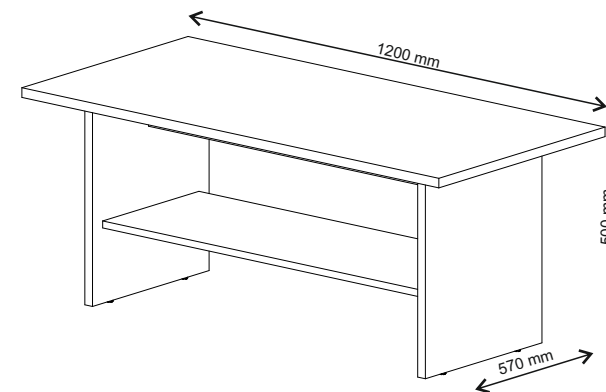


Code	Dimensions				Package
001	1200	570	22	1	1/1
002	472	400	22	2	1/1
003	936	330	16	1	1/1
004	936	100	16	1	1/1
accessories				1	1/1


<p>x8 r1</p> <p>Ø 15x12mm</p> 	<p>x4 r3</p> <p>Ø 15x15mm</p> 	<p>x12 r16</p> 	<p>x12 s2</p> 
<p>x10 f1</p> <p>Ø 8x30mm</p> 	<p>x4 k1</p> 	<p>x1 z1</p> 	

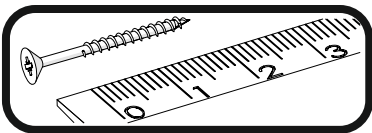


1

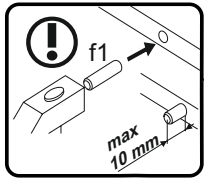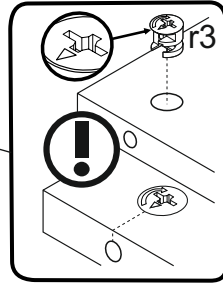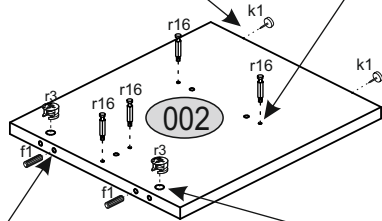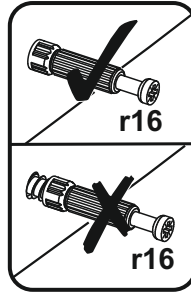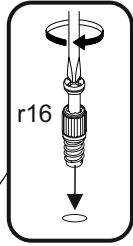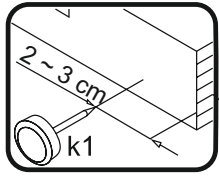


2

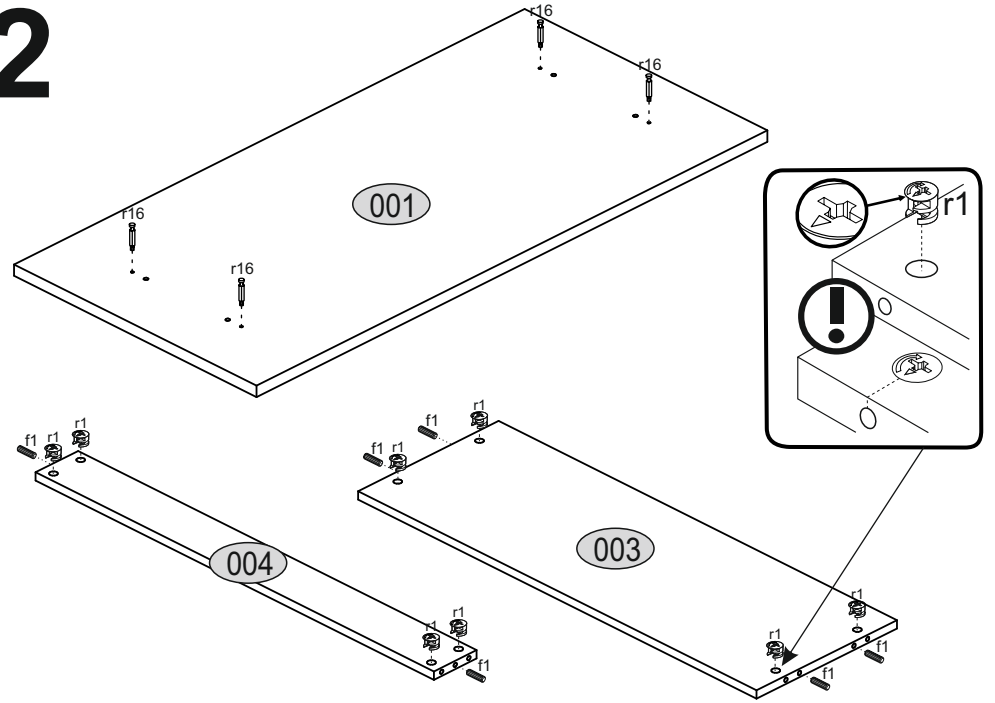



3

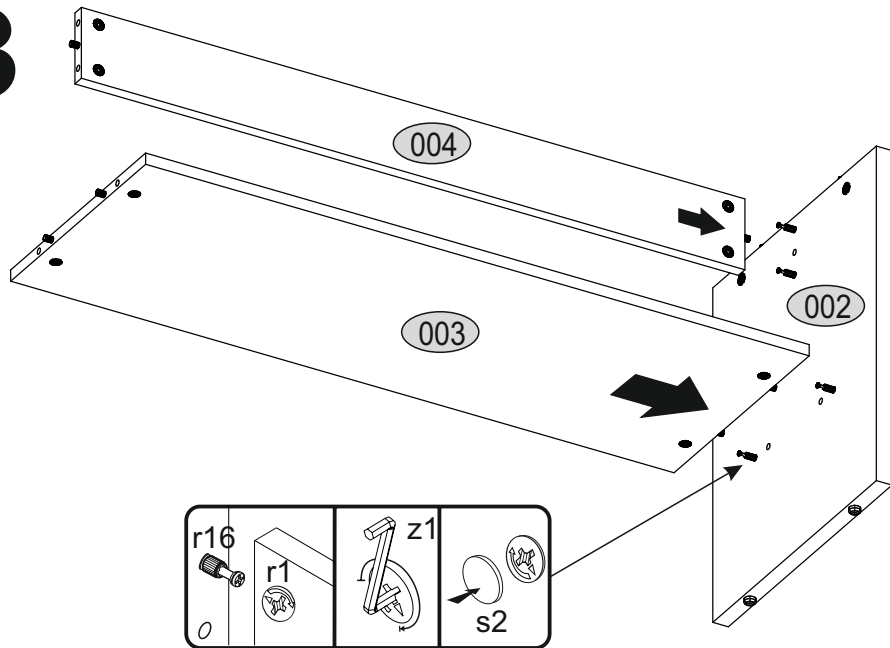

4

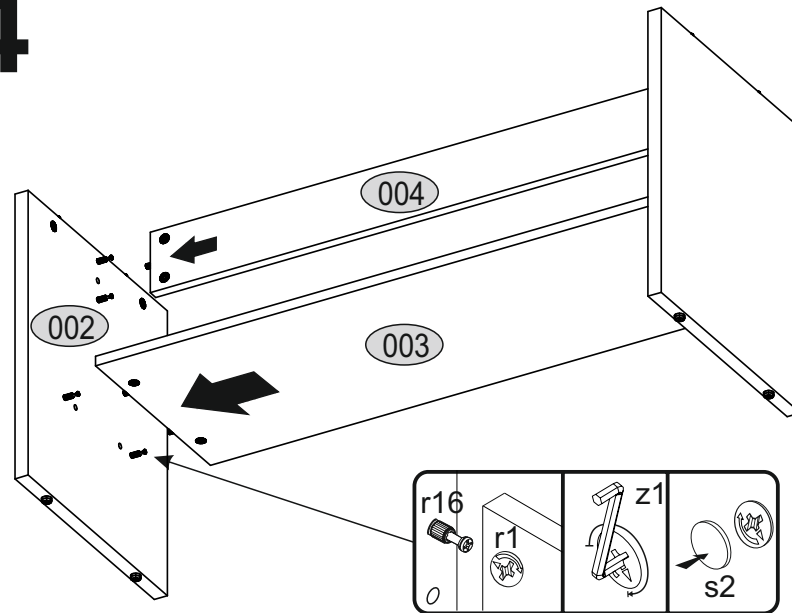

5

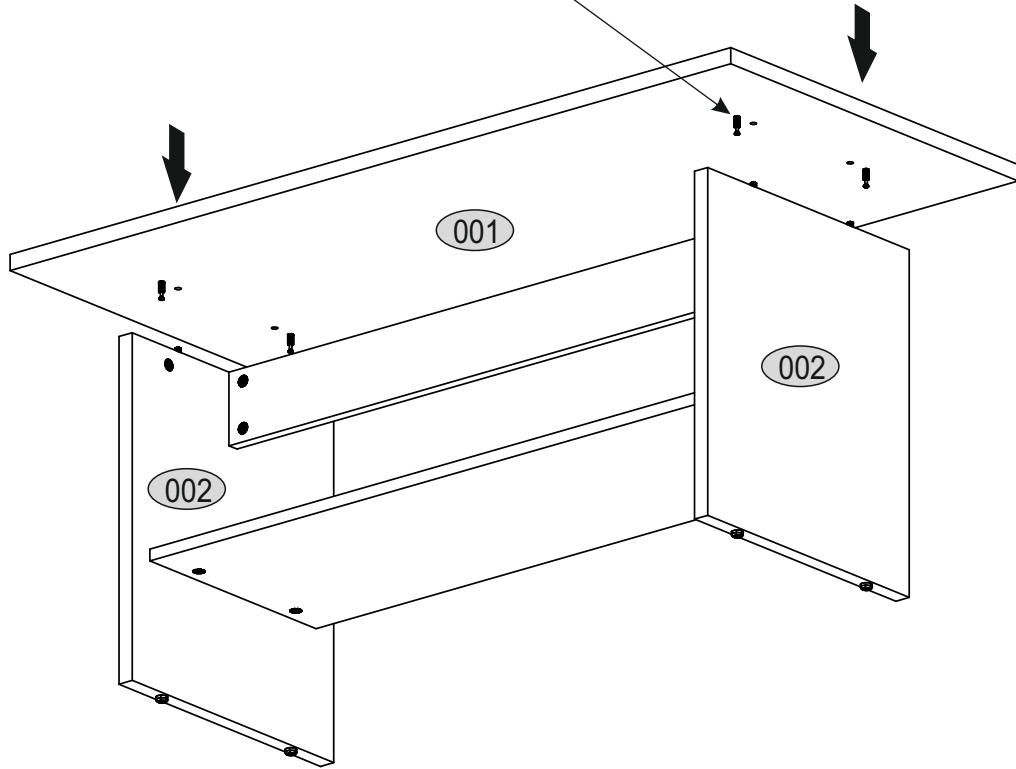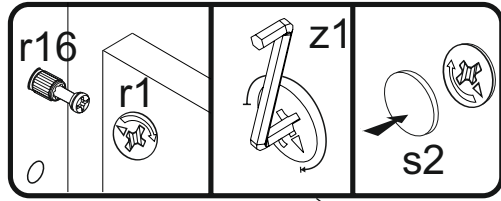

6

