



Instrukcja montażu mebli

«CAMERON LOFT NEW»

A

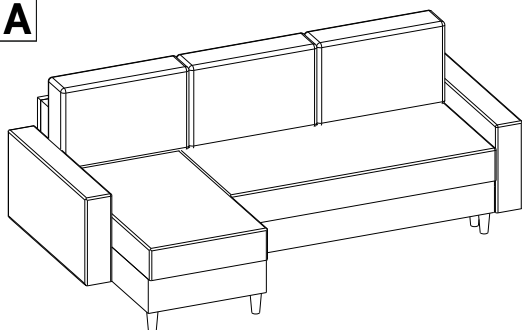


B

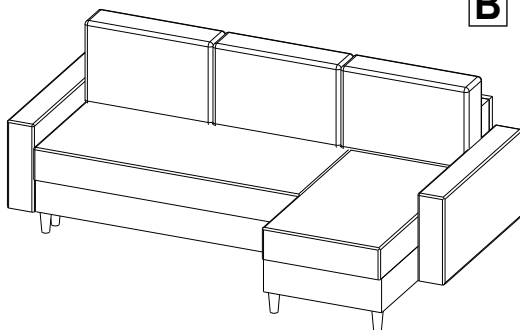



Data produkcji

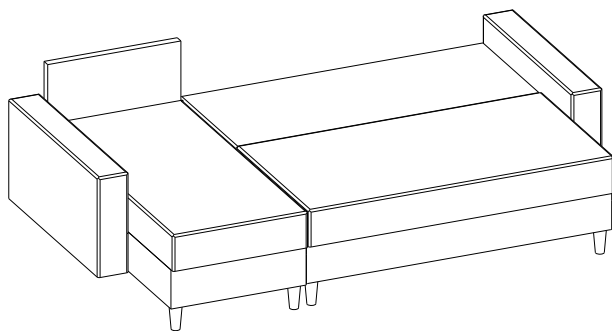


Pieczęć Działu Jakości

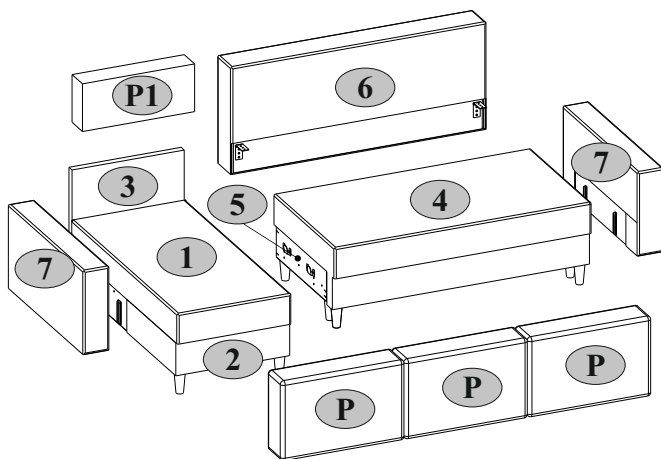


No	Pcs.	Paket
1	1	1/3
2	1	1/3
3	1	1/3
4	1	2/3
5	1	2/3
6	1	2/3
7	2	3/3
P	2	1/3
P	1	2/3
P1	1	2/3


















M16  M6x55 6	N34  H=120 10	Q5-1  Ø30 10
---	--	---







Plastikowe wsporniki N34 nie są dostarczane z podkładką filcową Q5-1!

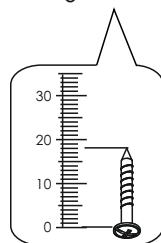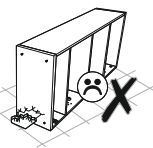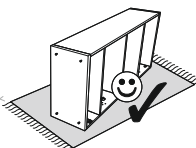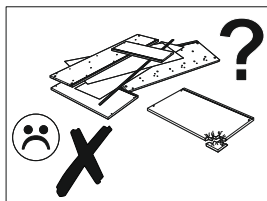


1

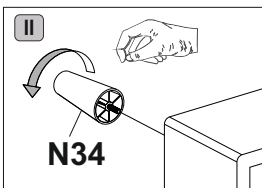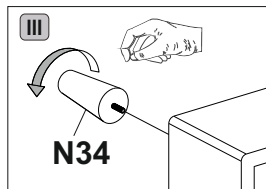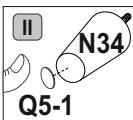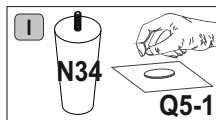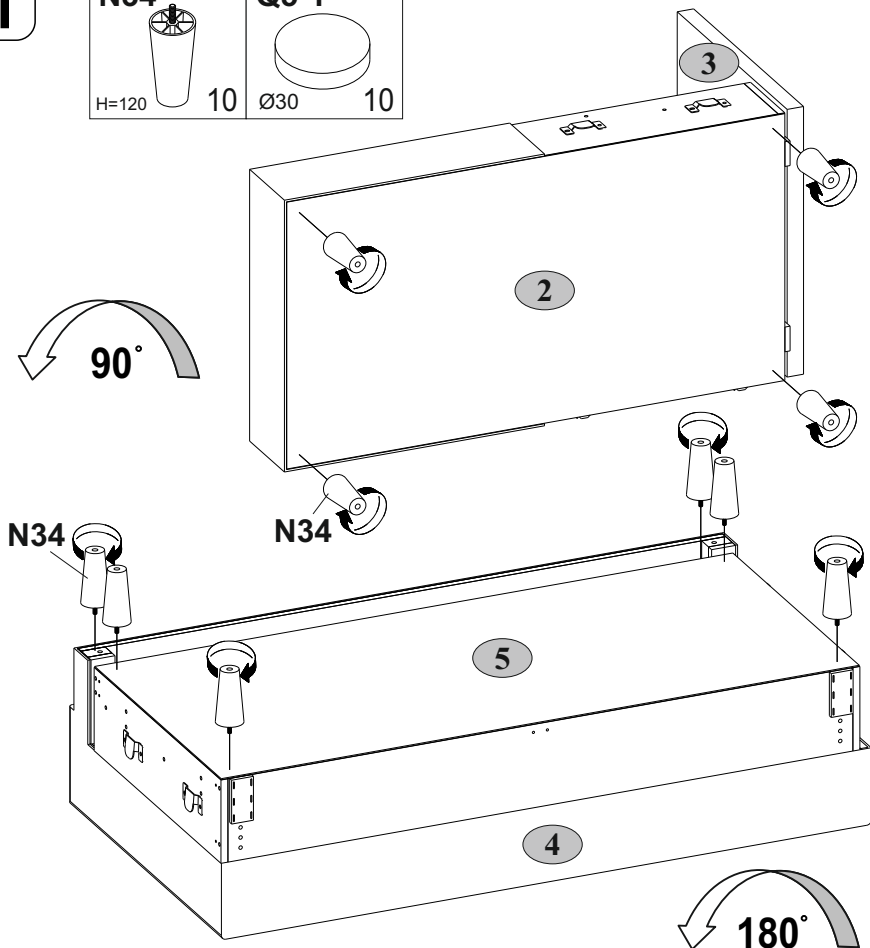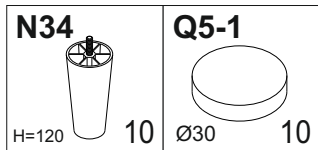

2

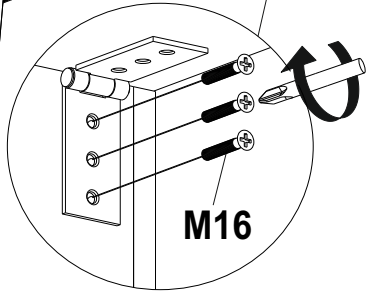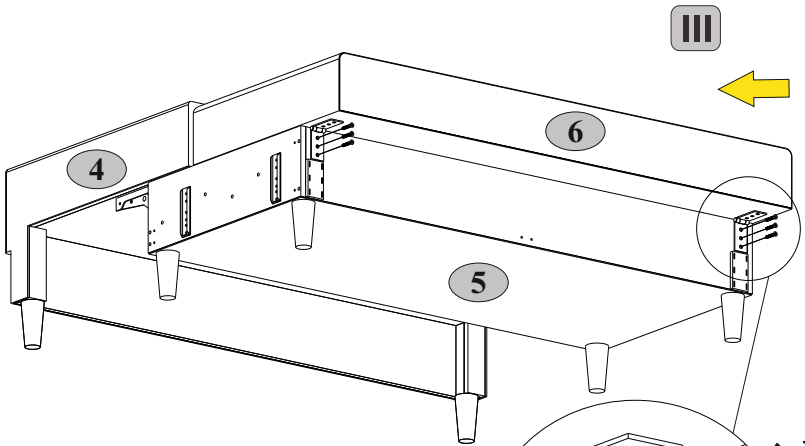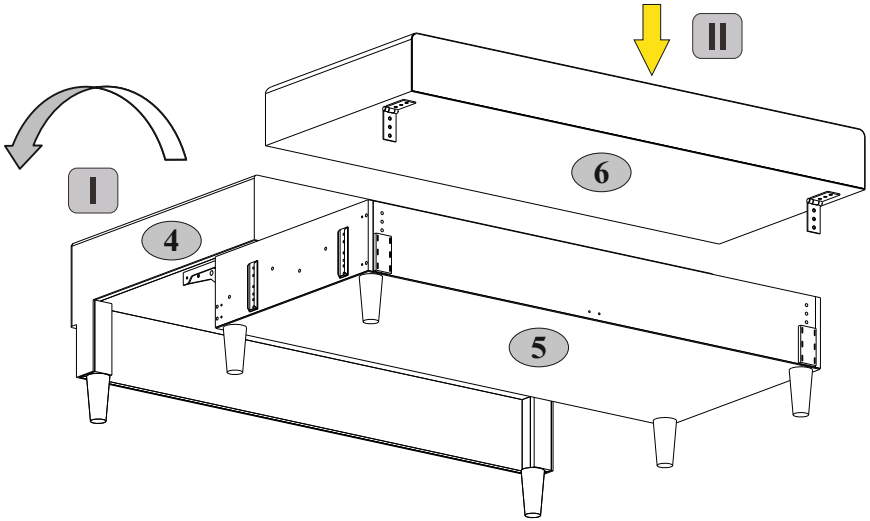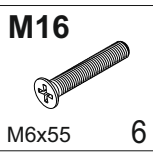


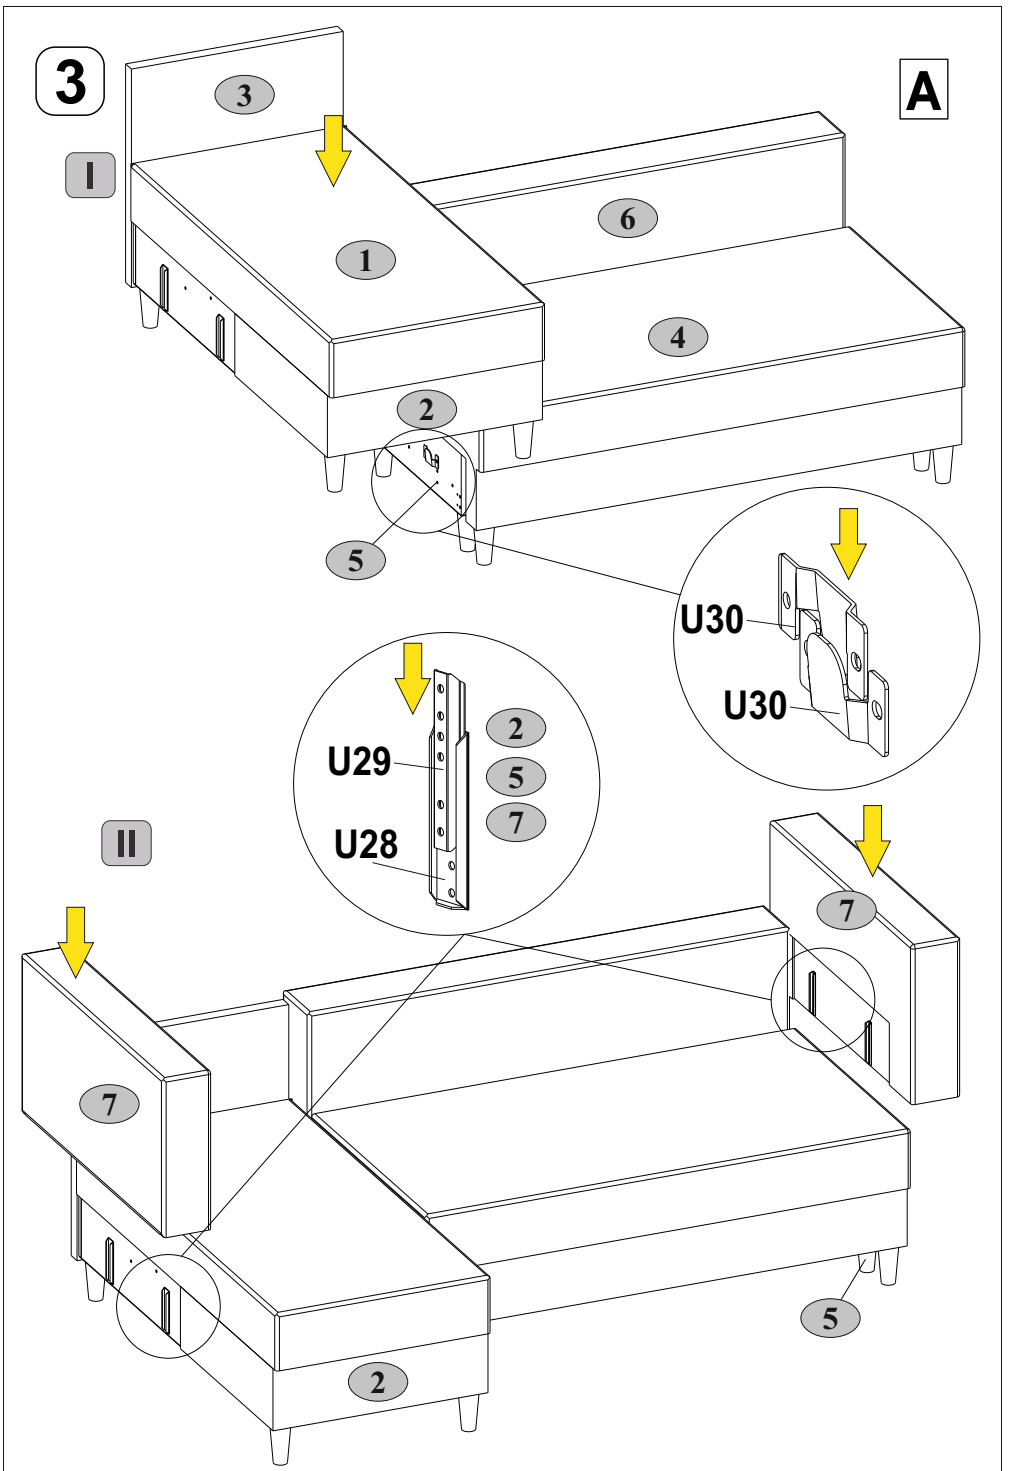


4

I

B

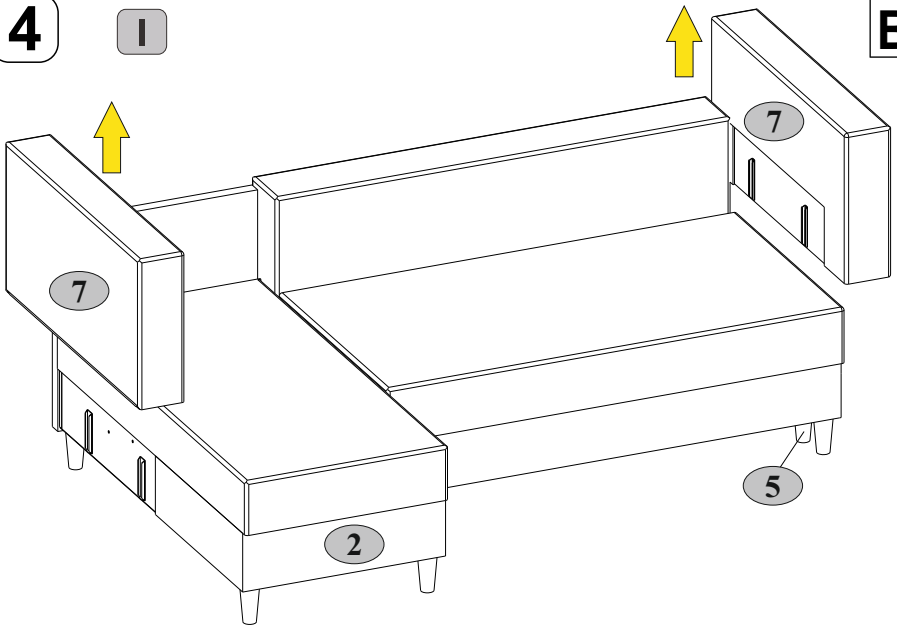



II

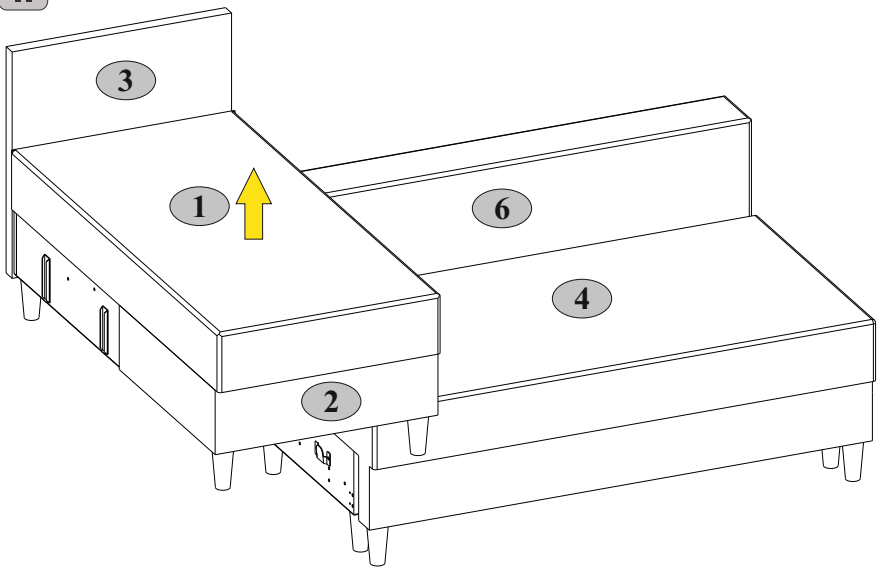



5

I

B

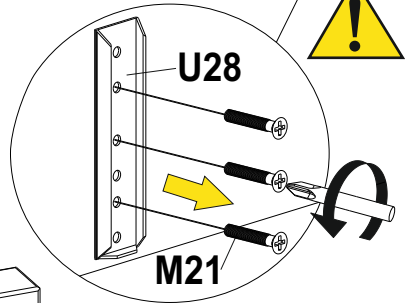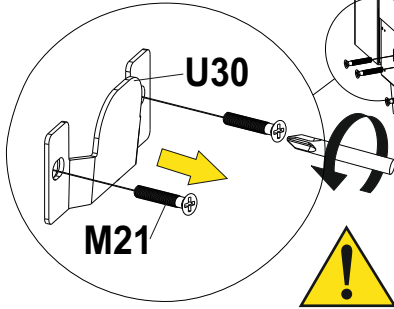



II

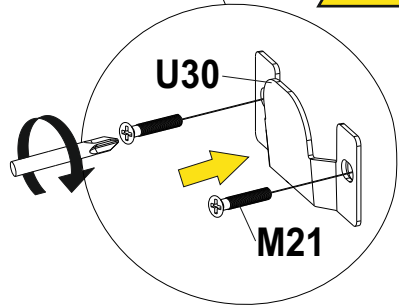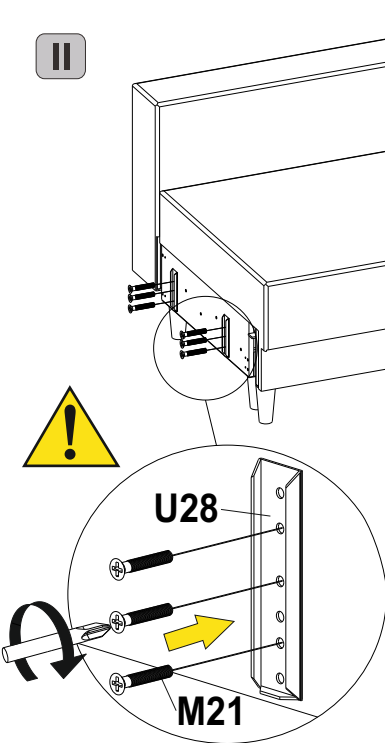



6

B

I

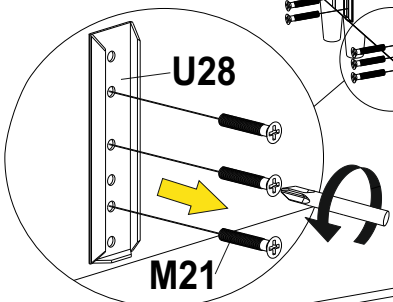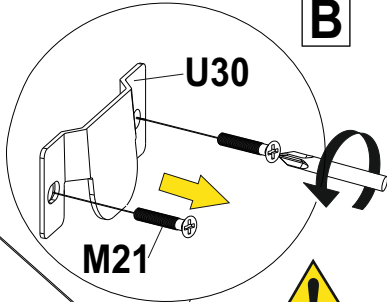



II

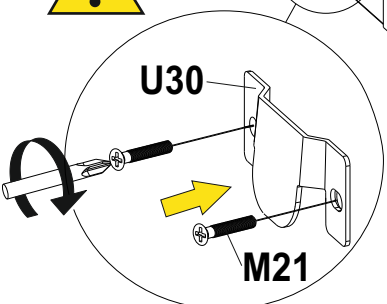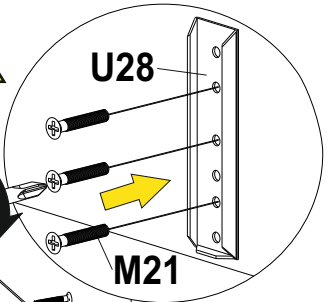



B

7







I

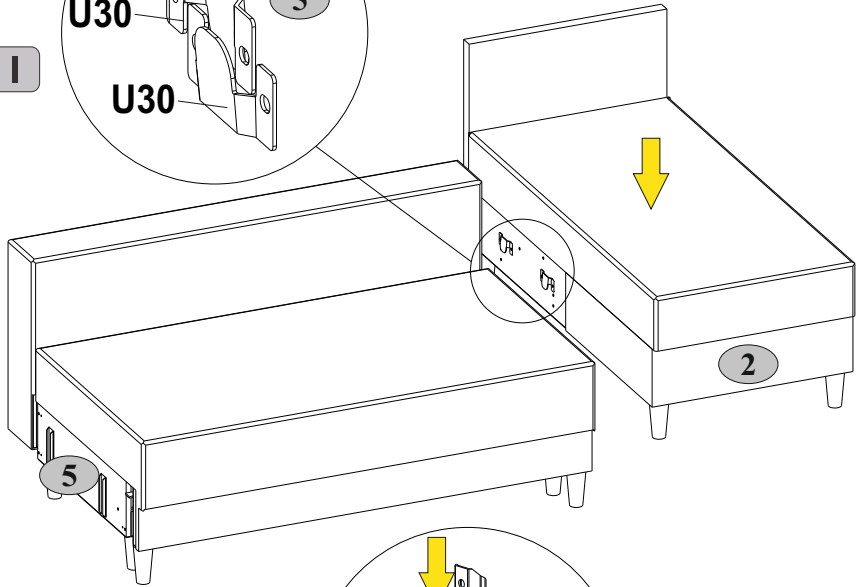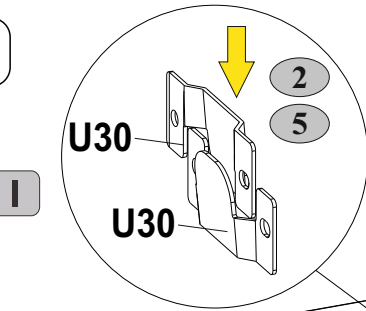





II

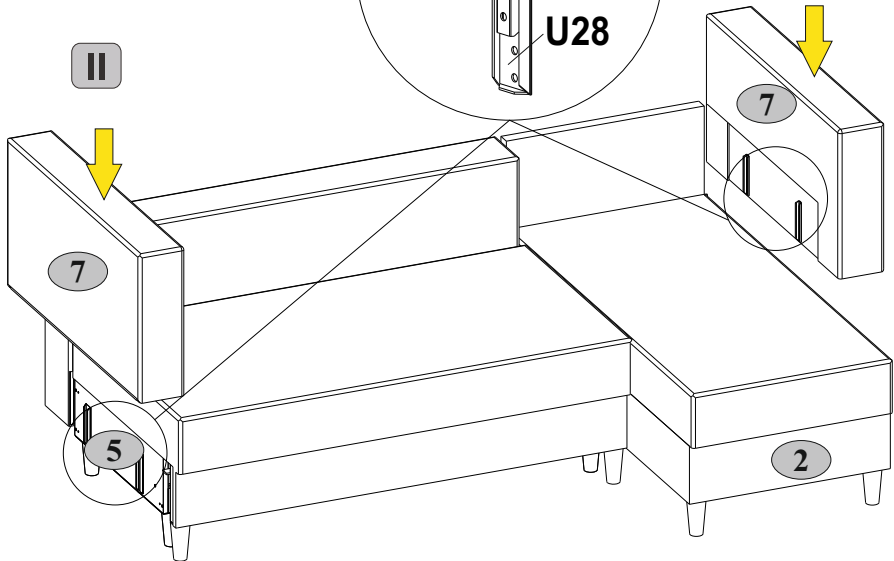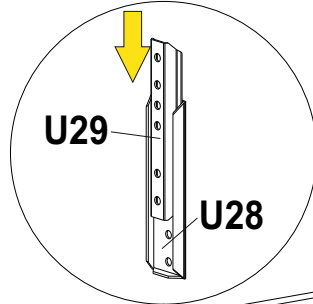



8

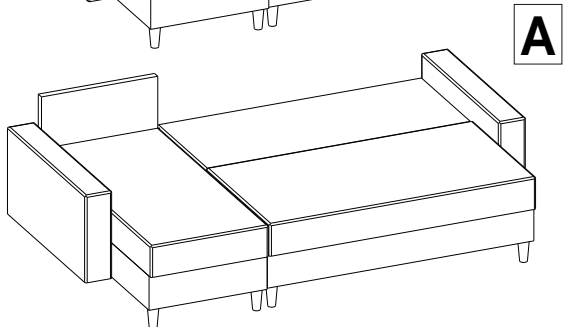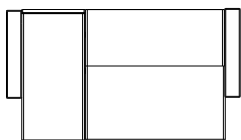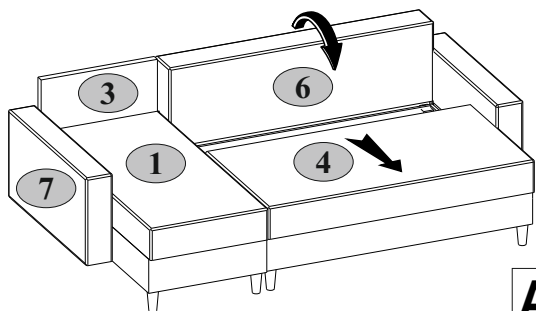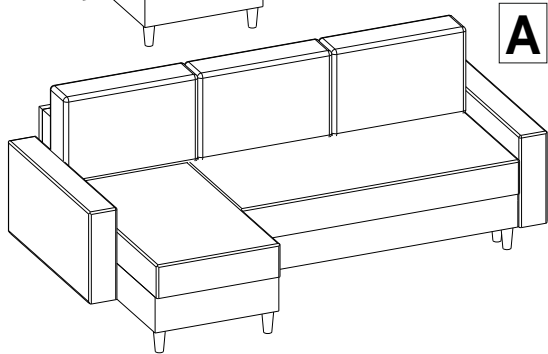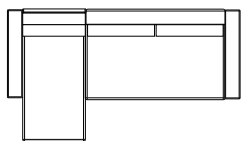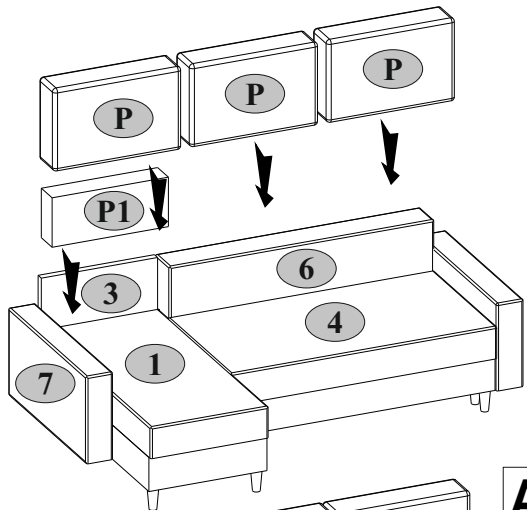

9

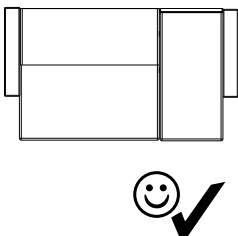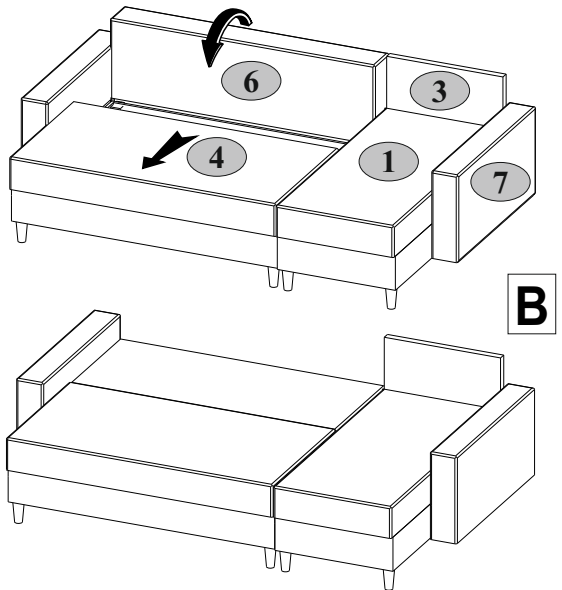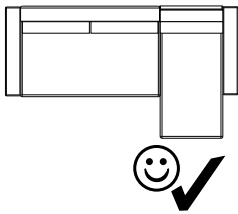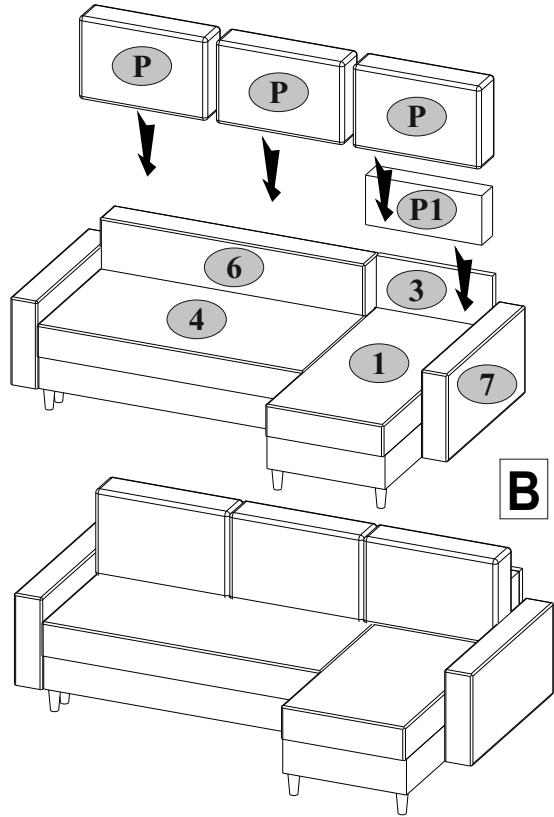


10

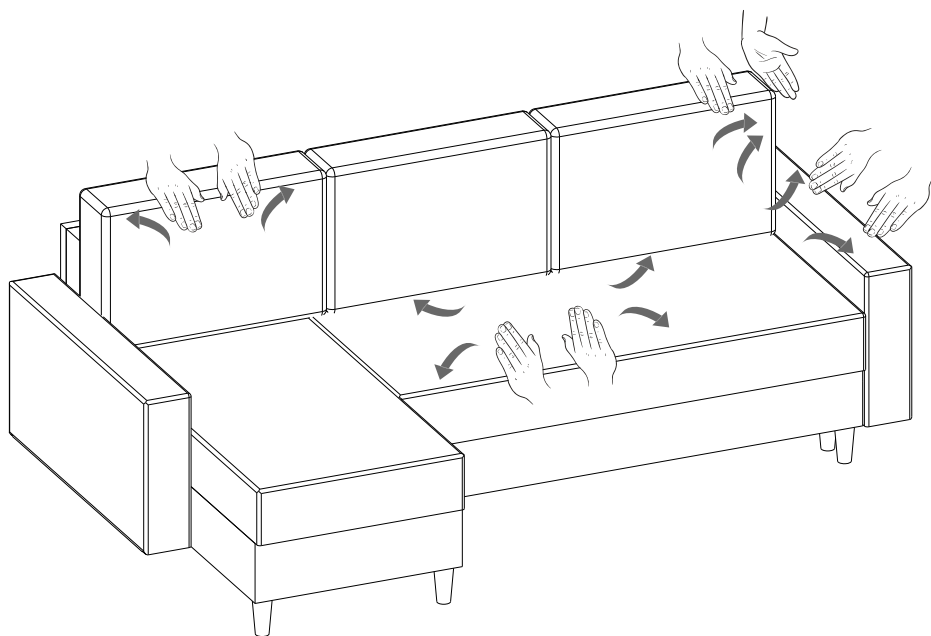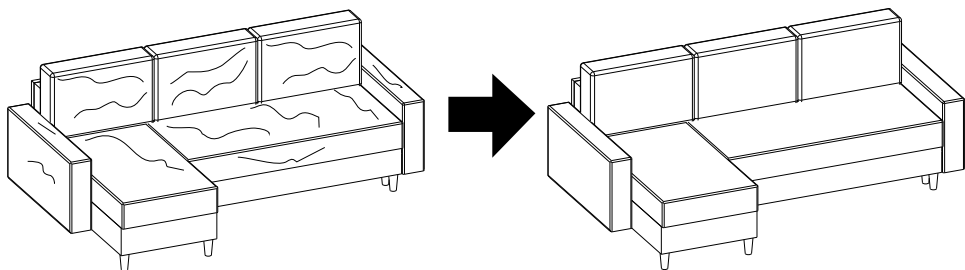

11

A

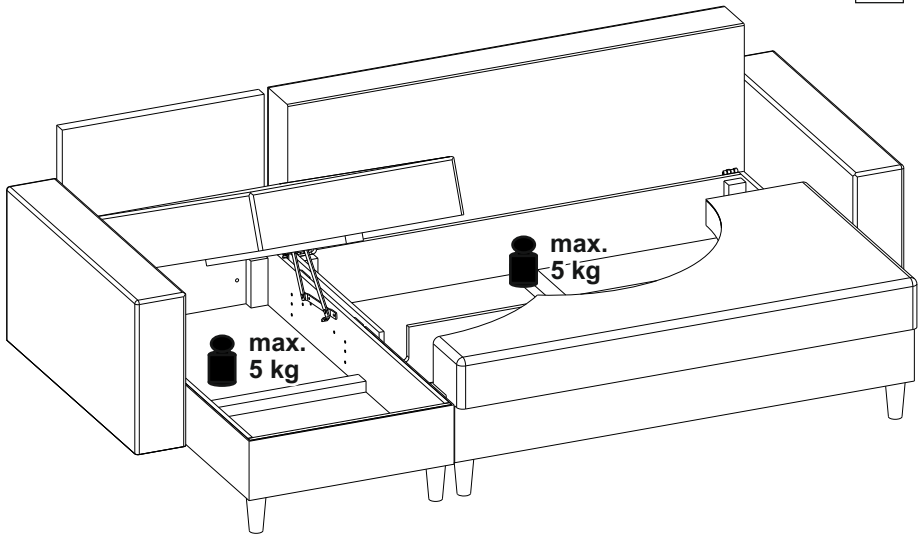

B

