

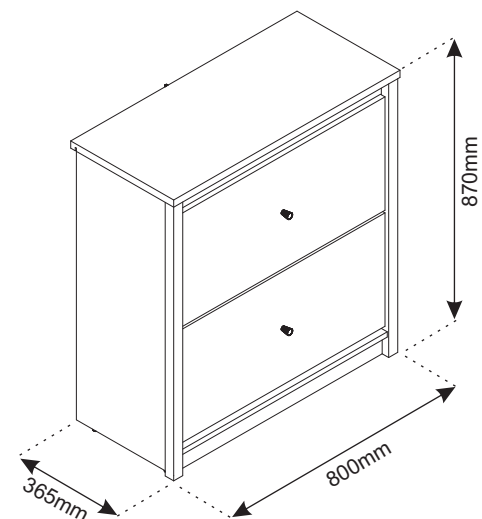
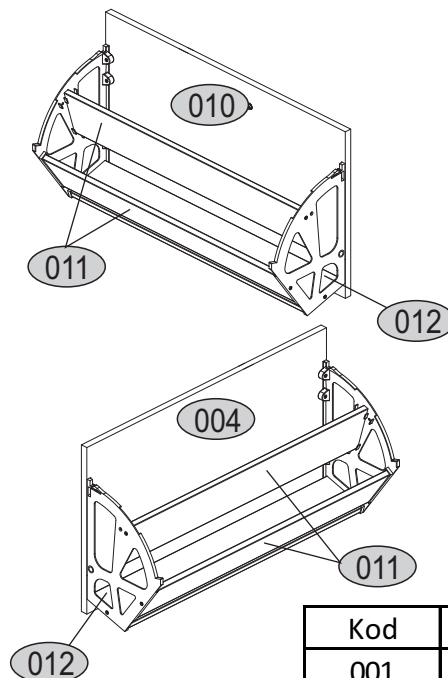
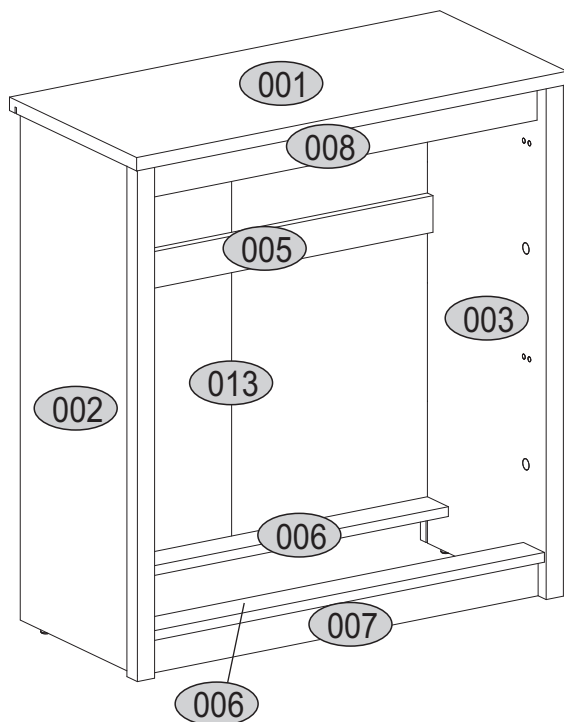



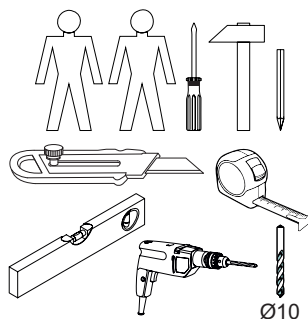


Instrukcja montażowa


KARIN Szafka na buty 2K

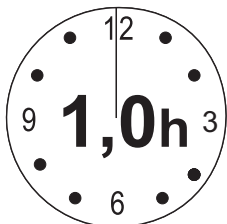






Kod	Wymiary			Pakiet	
	Wysokość	Szerokość	Głębokość		
001	800	364	22	1	1/2
002	839	360	16/32	1	1/2
003	839	360	16/32	1	1/2
004	722	346	16	1	1/2
005	728	60	16	1	1/2
006	728	60	16	2	1/2
007	728	60	16	1	1/2
008	728	60	16	1	1/2
010	722	346	16	1	1/2
011	718	140	10	4	1/2
012	718	85	10	2	1/2
013	786	746	2,5	1	1/2
Akcesoria				1	2/2

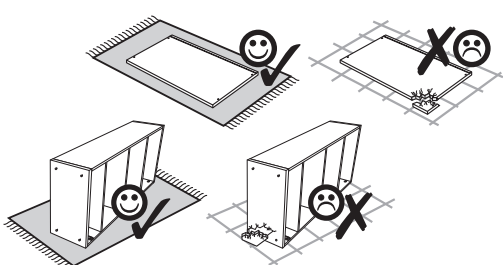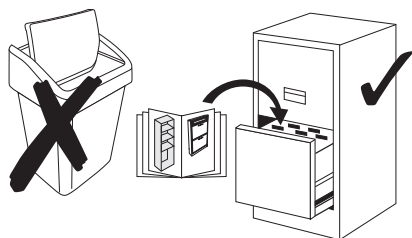



Accessories:

2x c411.058 	16x f1 Ø8x30 	1x f3 	4x k1 
1x n14 	1x n260.01 	1x p17 Ø6x50 	24x p25 Ø3.5x16 
2x m9 	4x m9(2) 	4x m11 	4x m10 
2x p9 	12x p52 	12x r1 15x12 	12x r16 Ø5x24 
9x l2 	4x j1 Ø4x20 	1x z1 	8x l1 

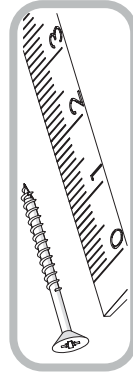


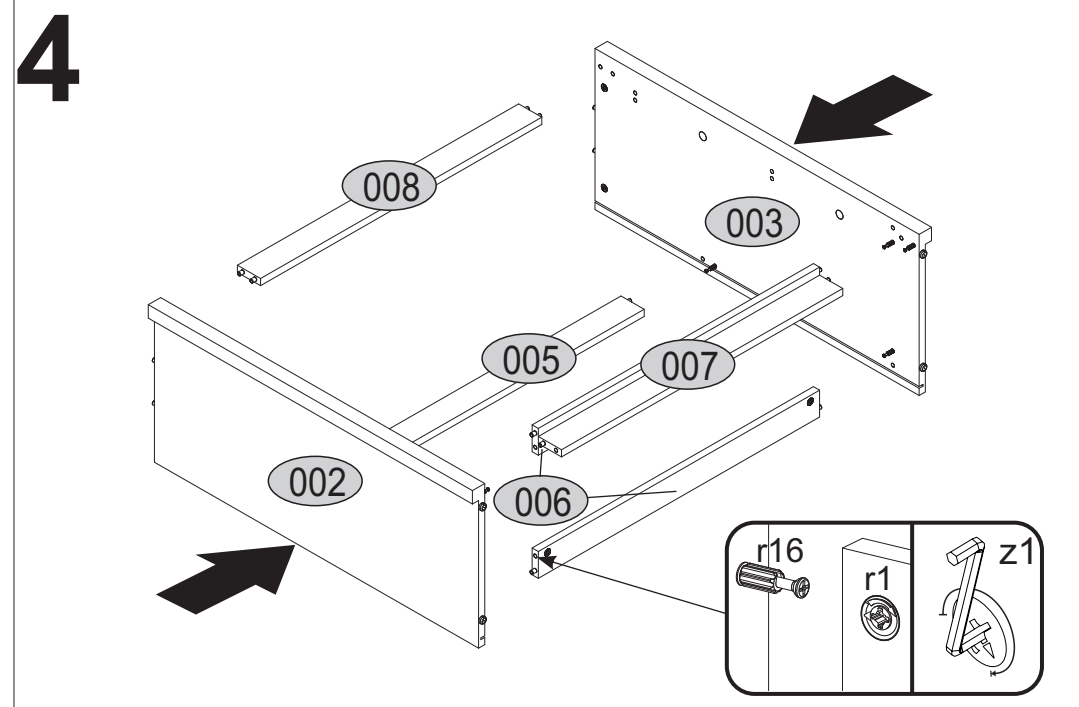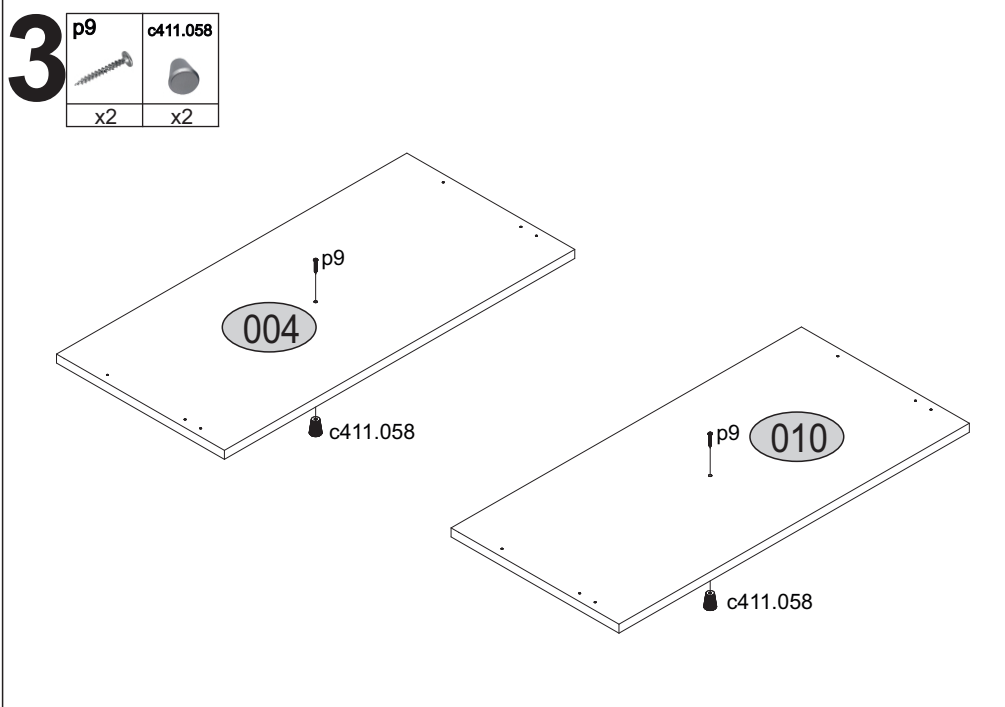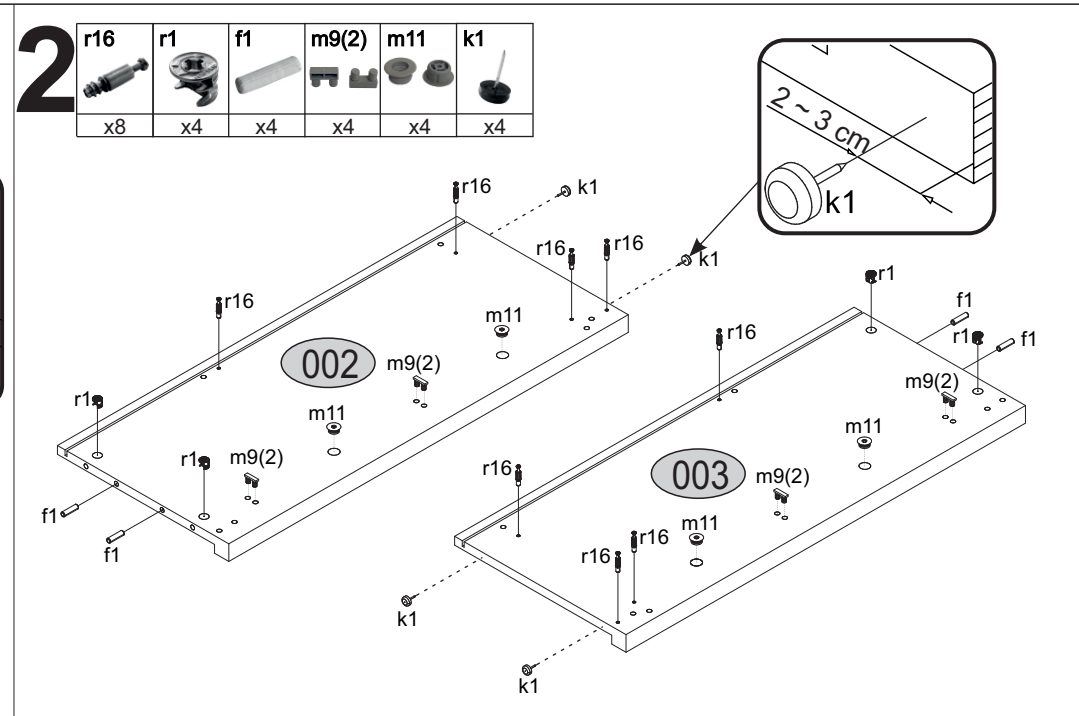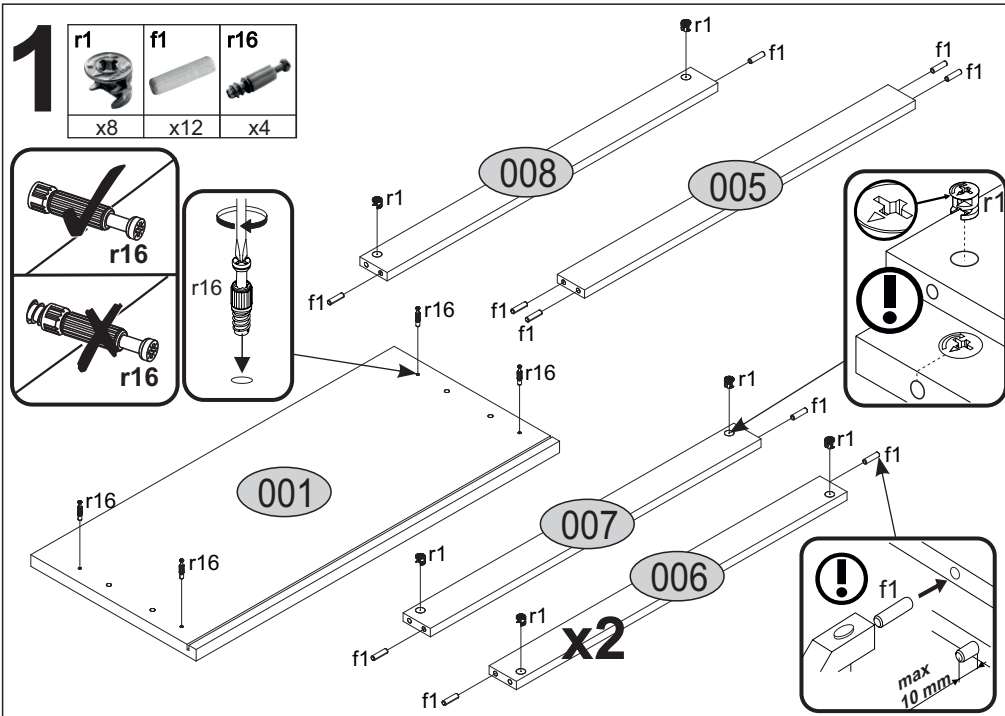






5

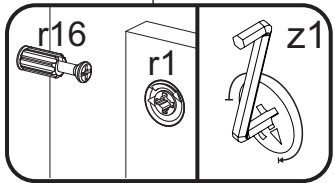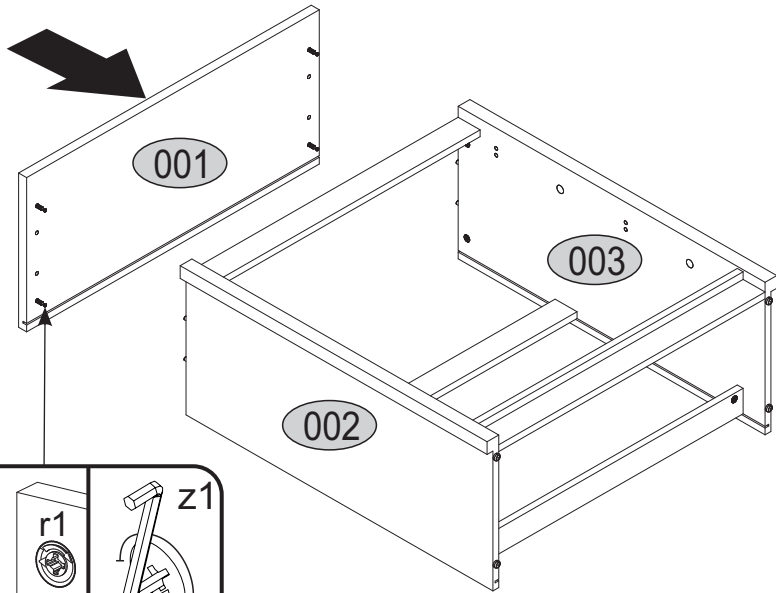




6

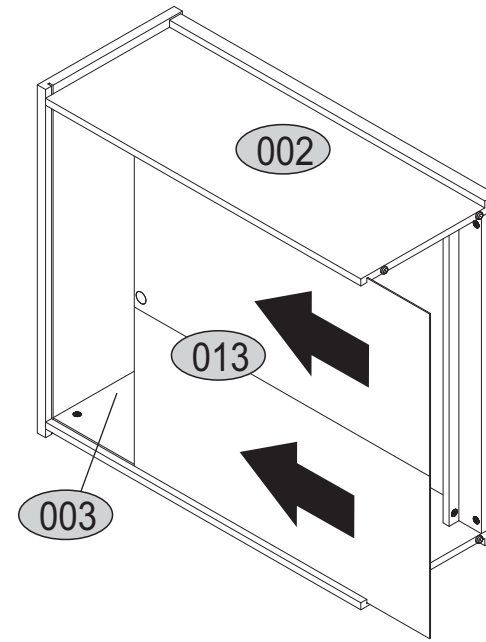

7

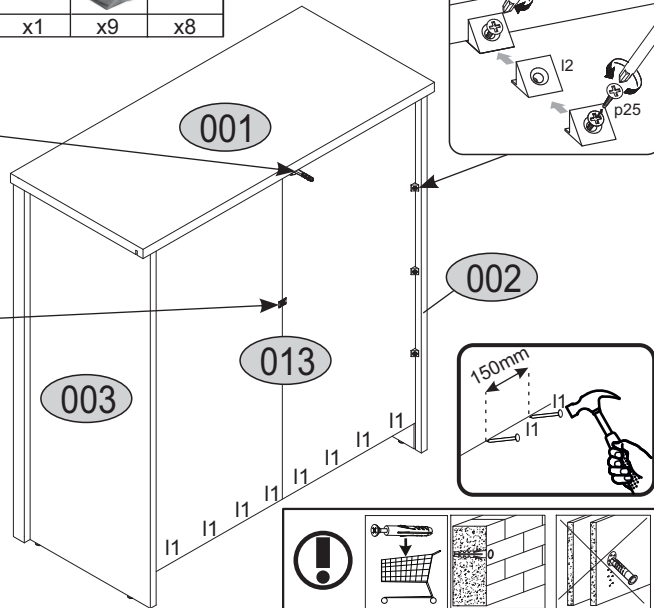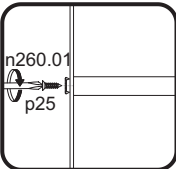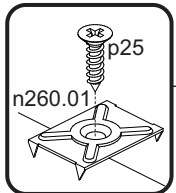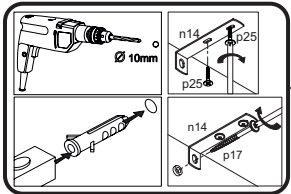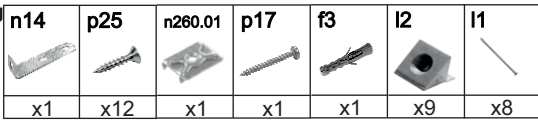


8

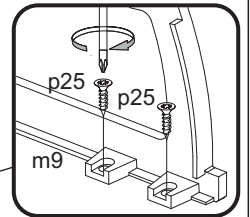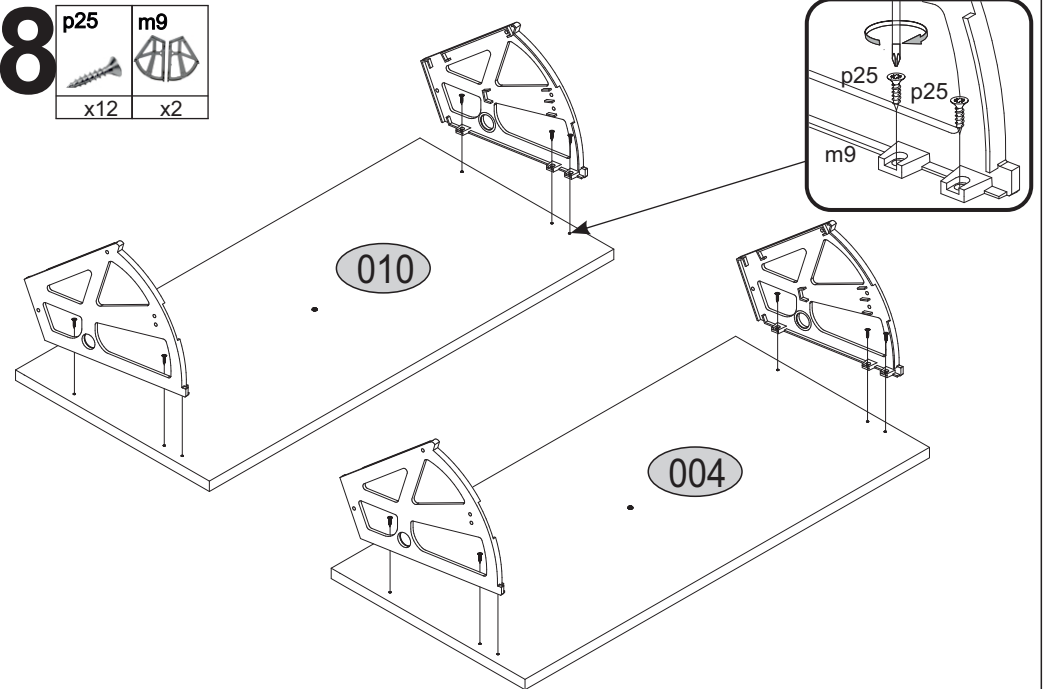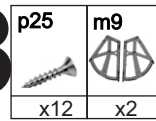

9

p52
x12

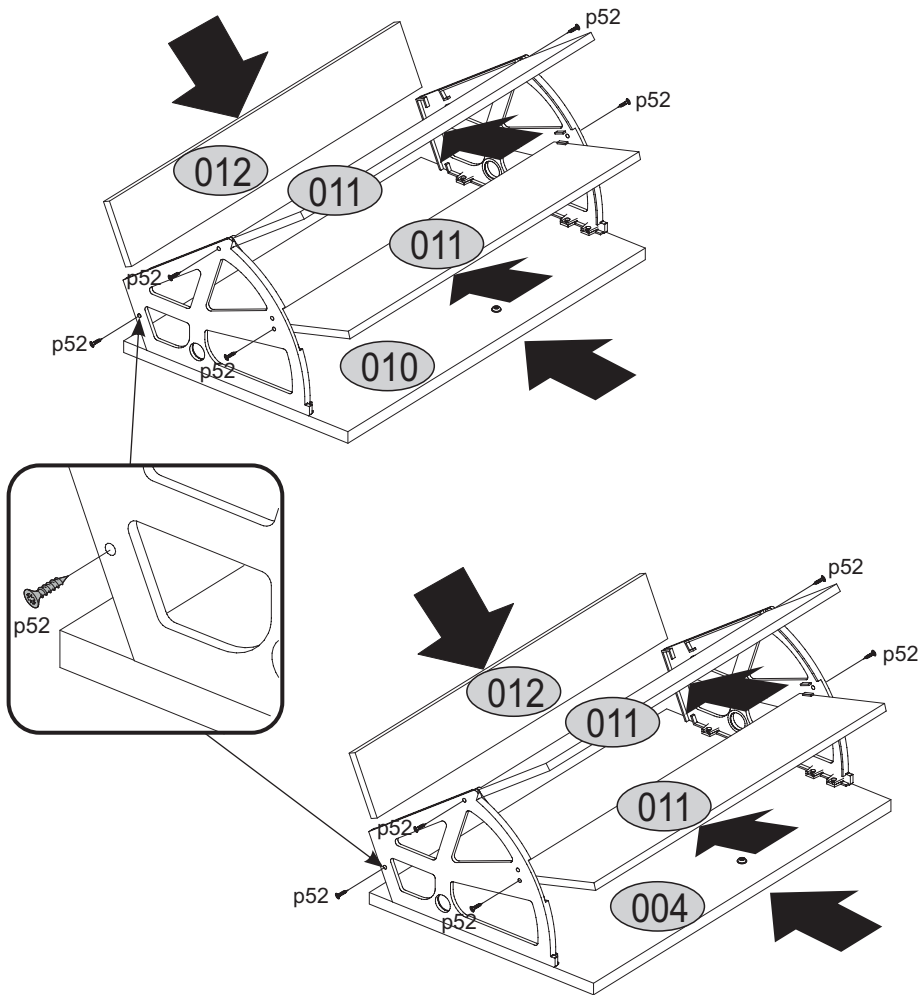

10

m10 j1
x4 x4

