



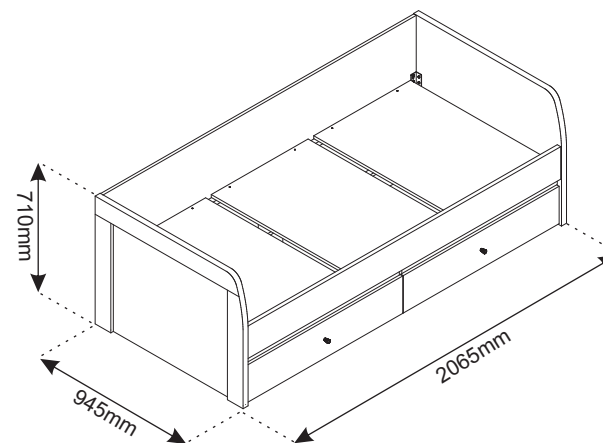



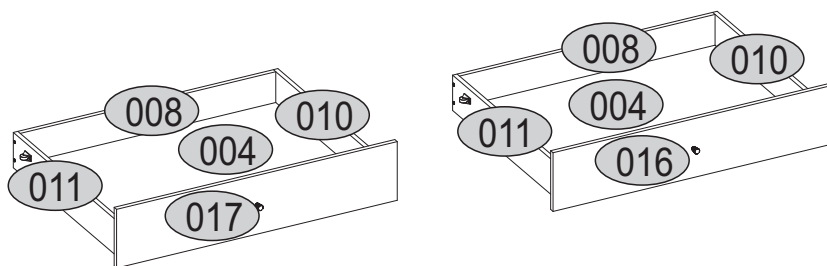


Instrukcja montażowa

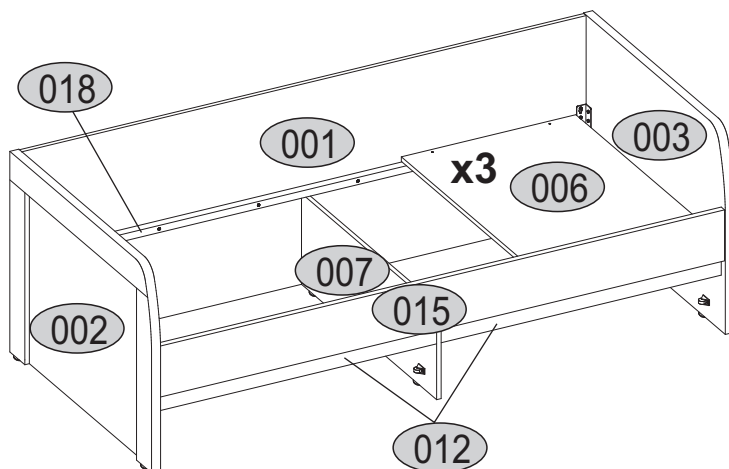

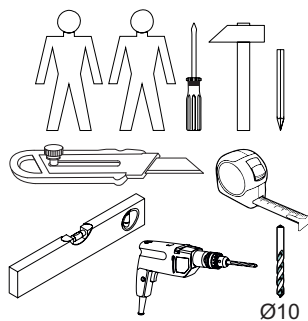

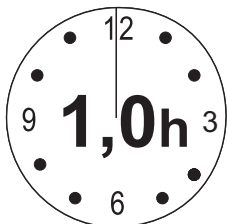

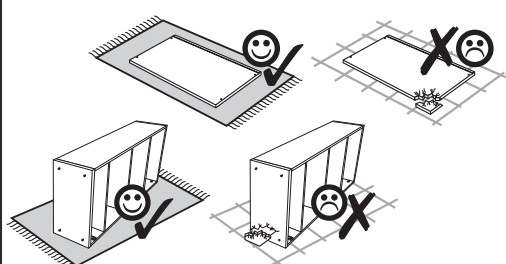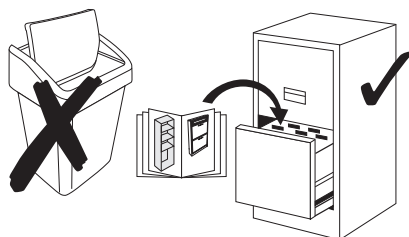


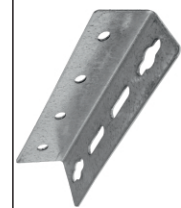







KARIN Łóżko 2S 90*200




Kod	Wymiary			Pakiet
	Wysokość	Szerokość	Długość	
001	2000	702	16	1 / 1/3
002	944	704	16/32	1 / 1/3
003	944	704	16/32	1 / 1/3
004	905	700	16	2 / 2/3
007	900	314	16	1 / 2/3
008	905	124	16	2 / 2/3
010	716	124	16	2 / 1/3
011	716	124	16	2 / 1/3
012	70	992	16	2 / 3/3
015	2000	179	22	1 / 3/3
016	994	206	16	1 / 3/3
017	994	206	16	1 / 3/3
018	1880	30	27	2 / 3/3
Akcesoria				1 / 1/3




Aksesoria:

<p>39x f1 Ø8x30</p> 	<p>21x r1 15x12</p> 	<p>25x r16 Ø5x24</p> 	<p>8x e1 Ø7x50</p> 
<p>4x r3</p> 	<p>32x e2</p> 	<p>48x p25 Ø3.5x16</p> 	<p>12x p21 Ø4.0x30</p> 
<p>16x k34</p> 	<p>4x n63</p> 	<p>2x p9 Ø4x30</p> 	<p>12x p10 Ø4x40</p> 
<p>8x s2</p> 	<p>2x c411.058</p> 	<p>2x f6</p> 	<p>1x z1</p> 
<p>8x k1</p> 	<p>4x n221</p> 		

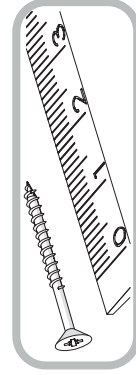


1

r1	f1	k34	p25	f6	k1
x15	x27	x14	x28	x2	x2

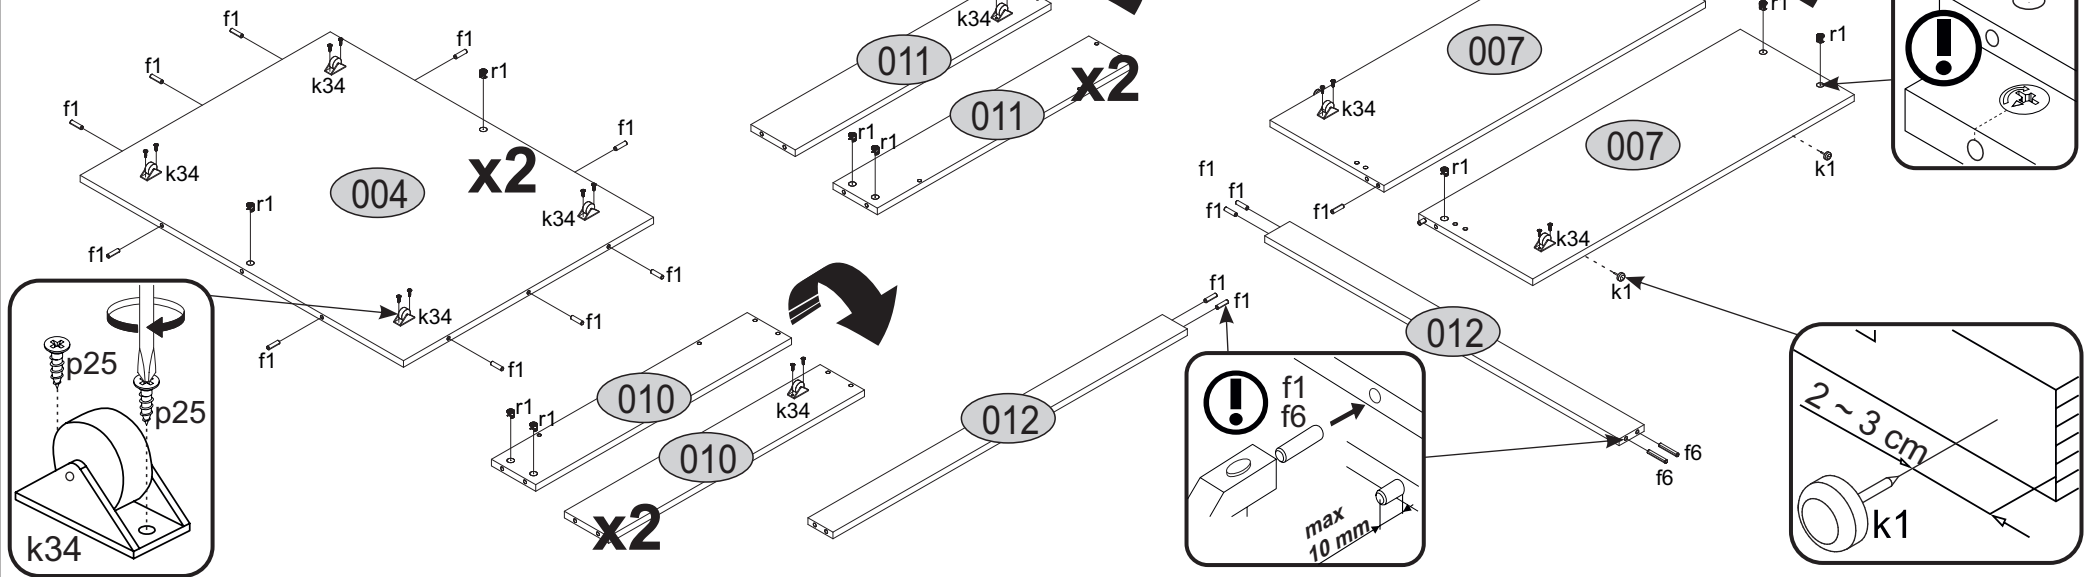


2

r1	f1	r16	c411.058	p9	r3	k1
x6	x12	x15	x2	x2	x4	x2


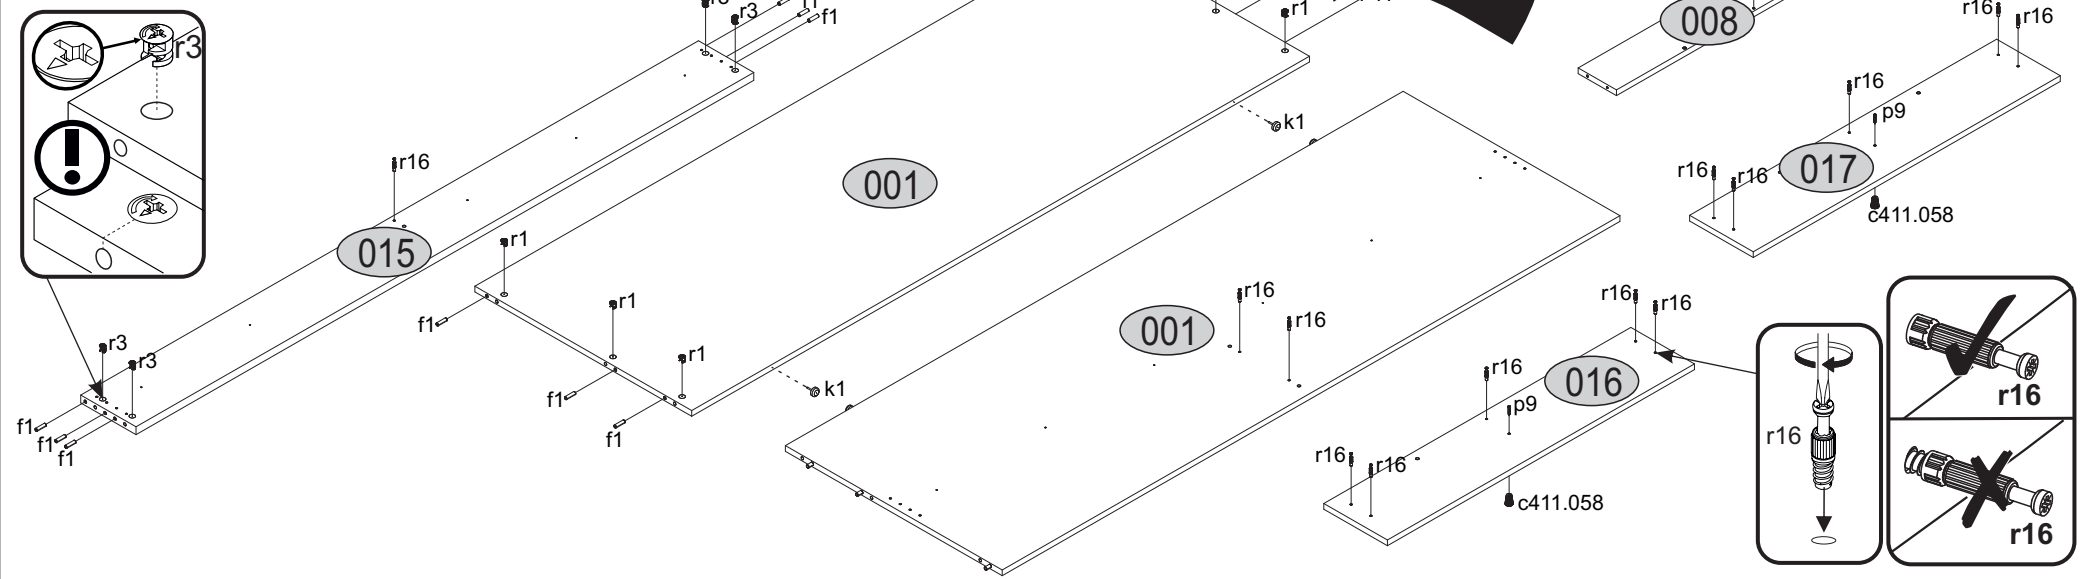


3



k34	p25	r16	k1
x2	x4	x10	x4

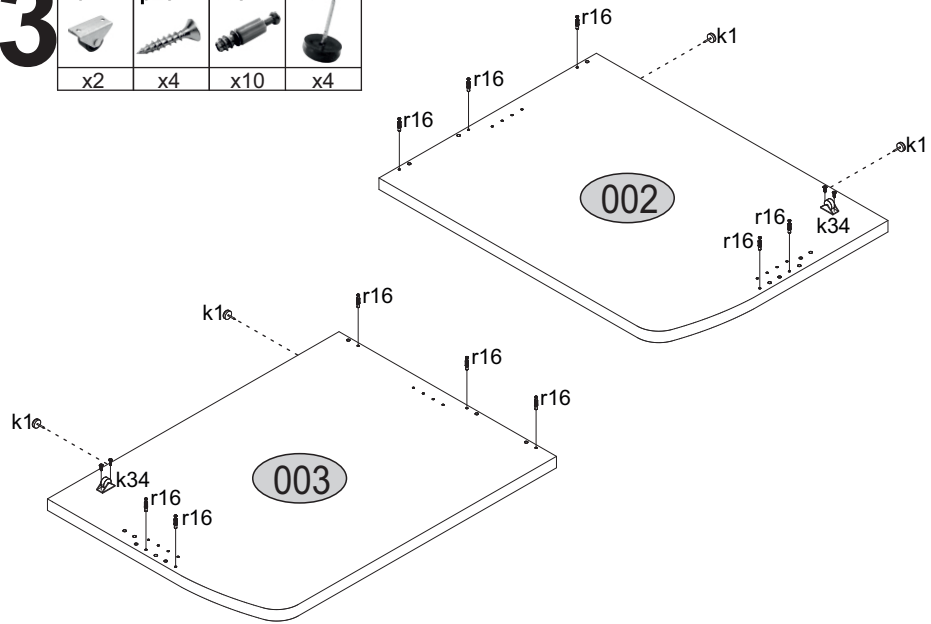


4

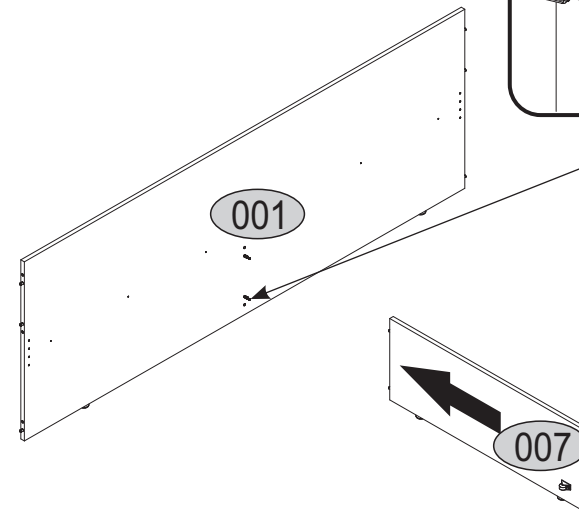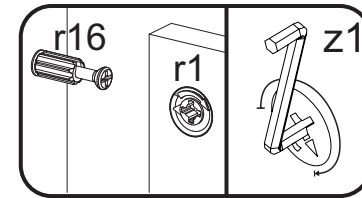


5

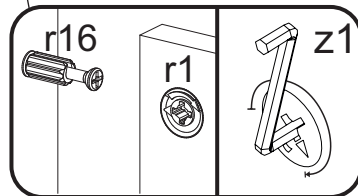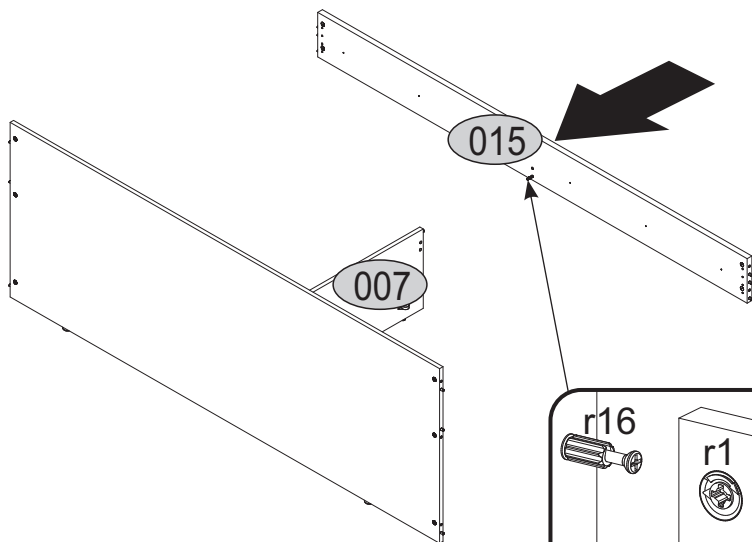


6

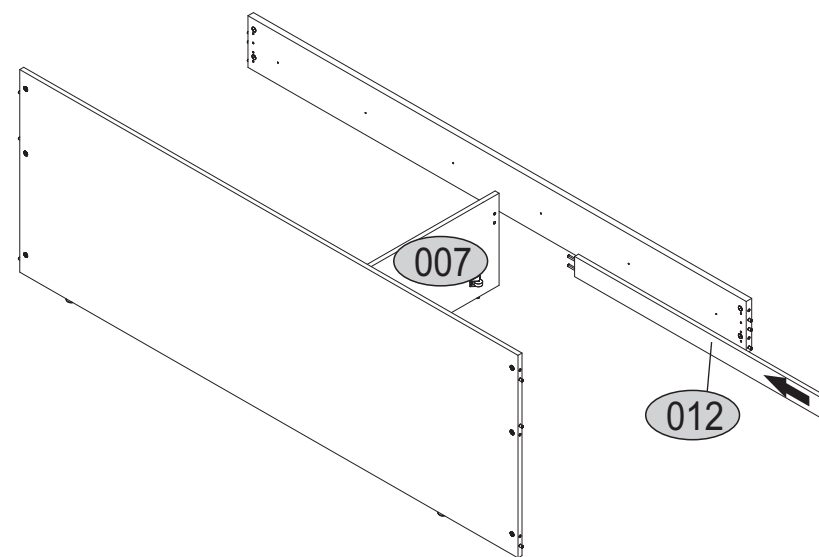

7



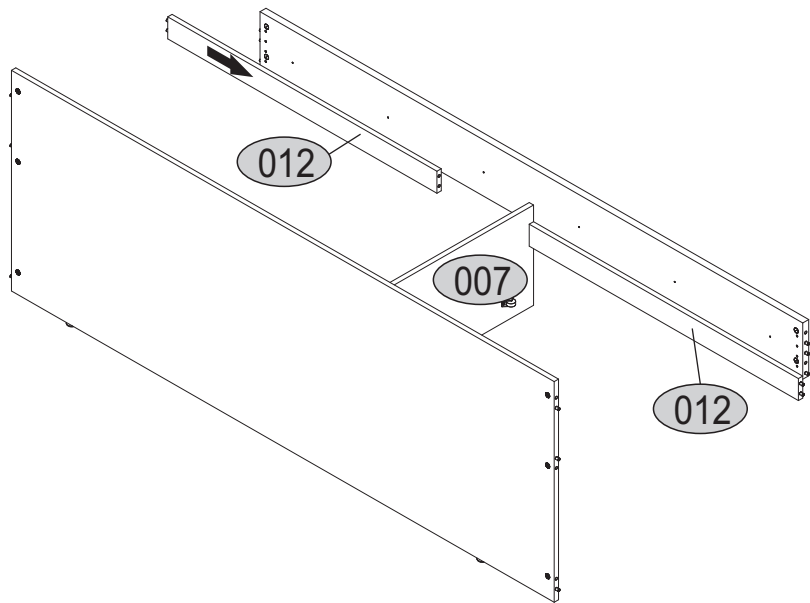


8

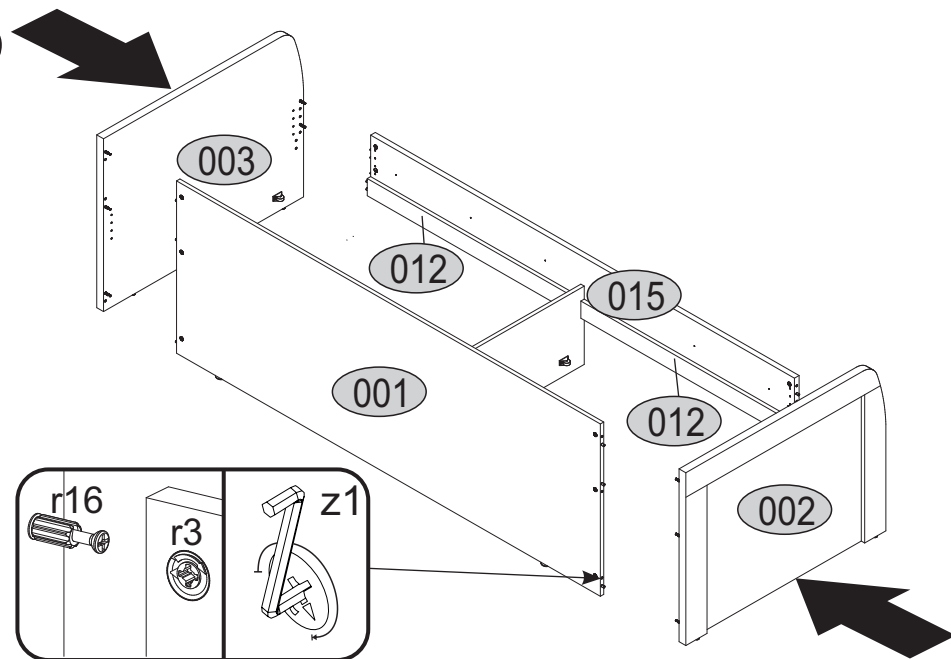


9


n63	e2	p10	n221	p25
x4	x32	x12	x4	x16

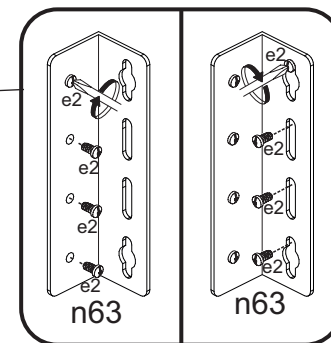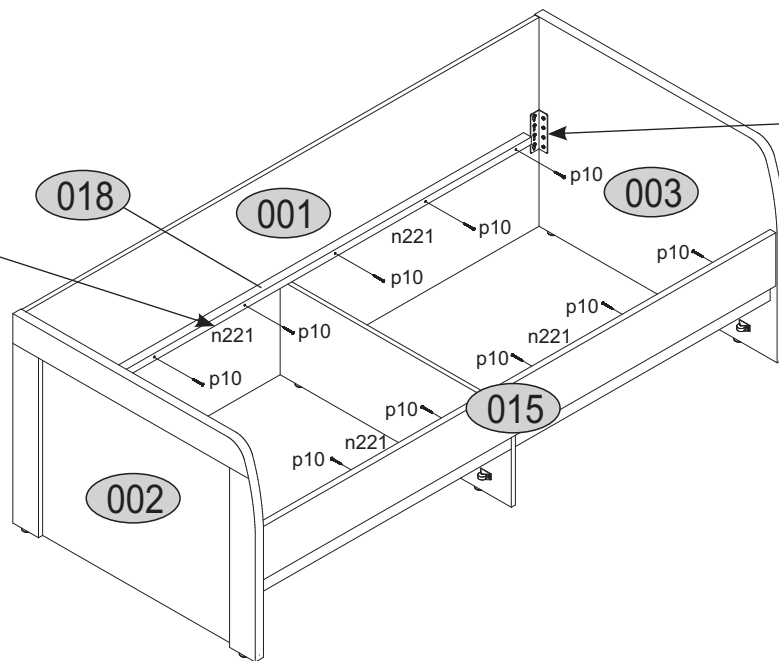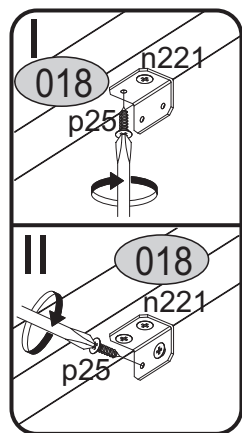


10

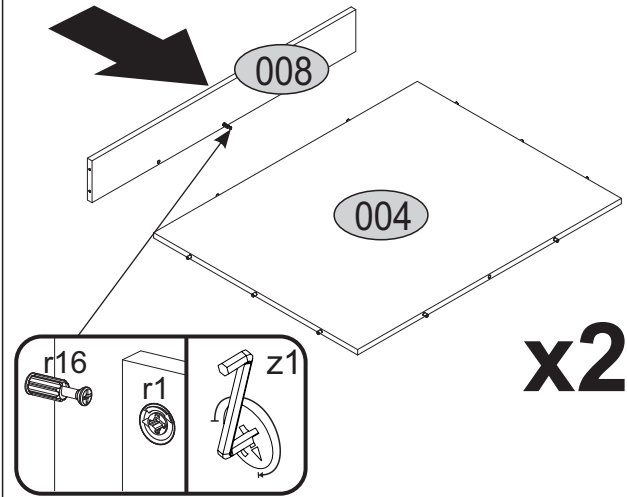



11

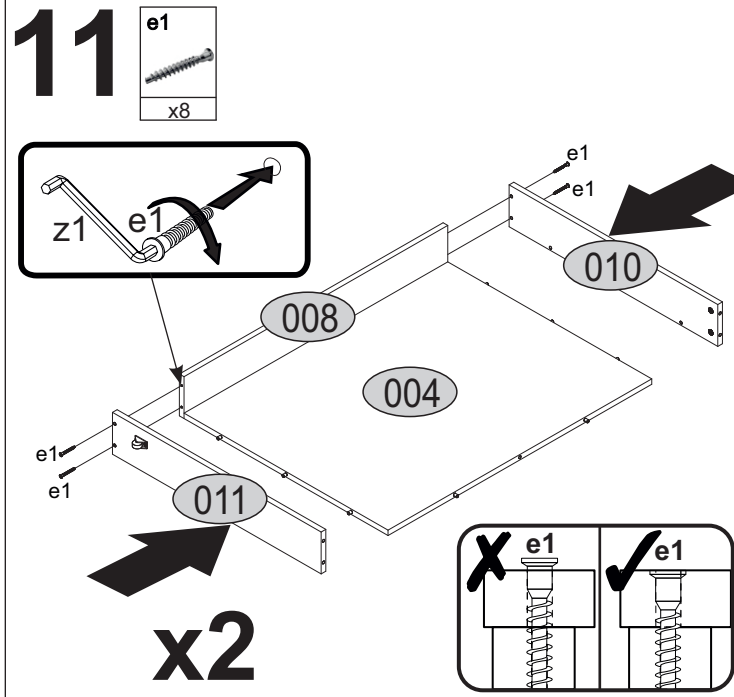


12

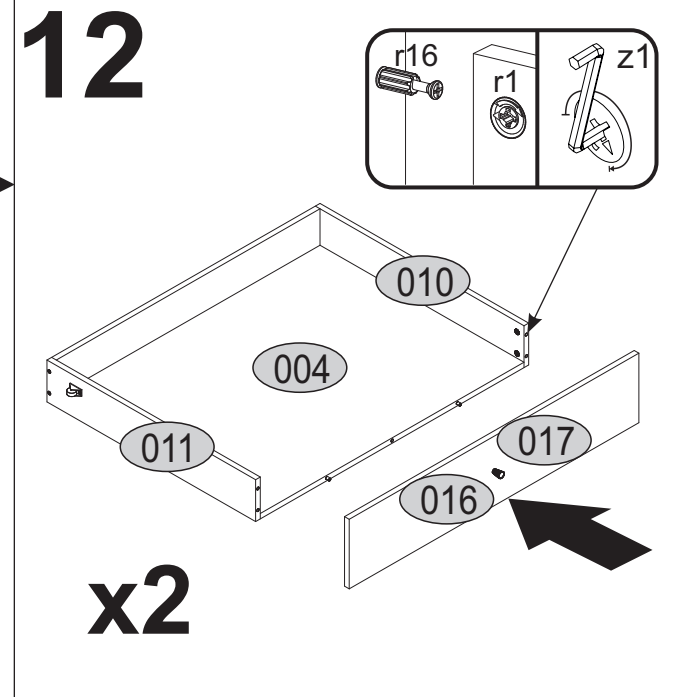

13

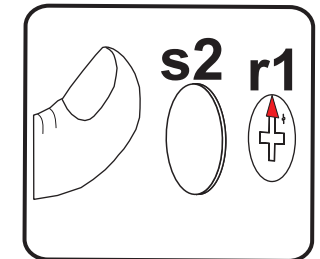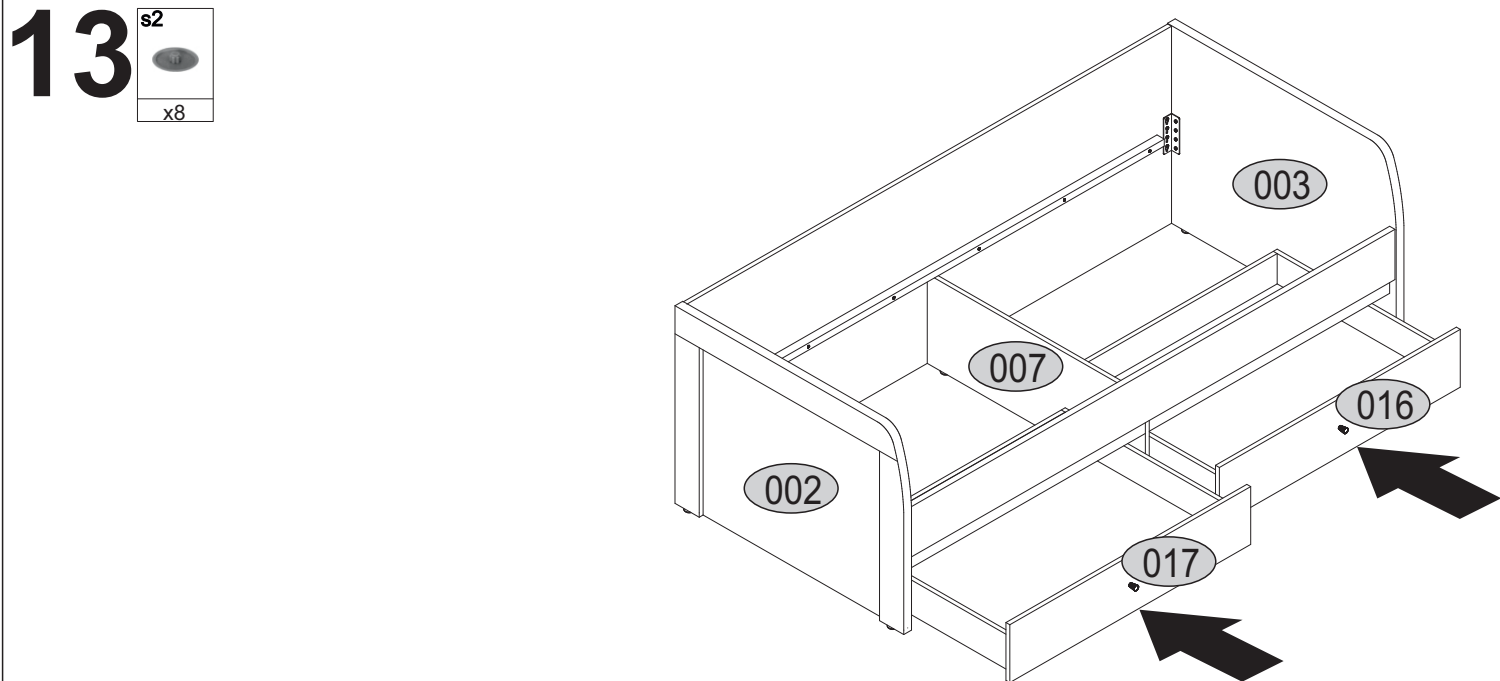

14

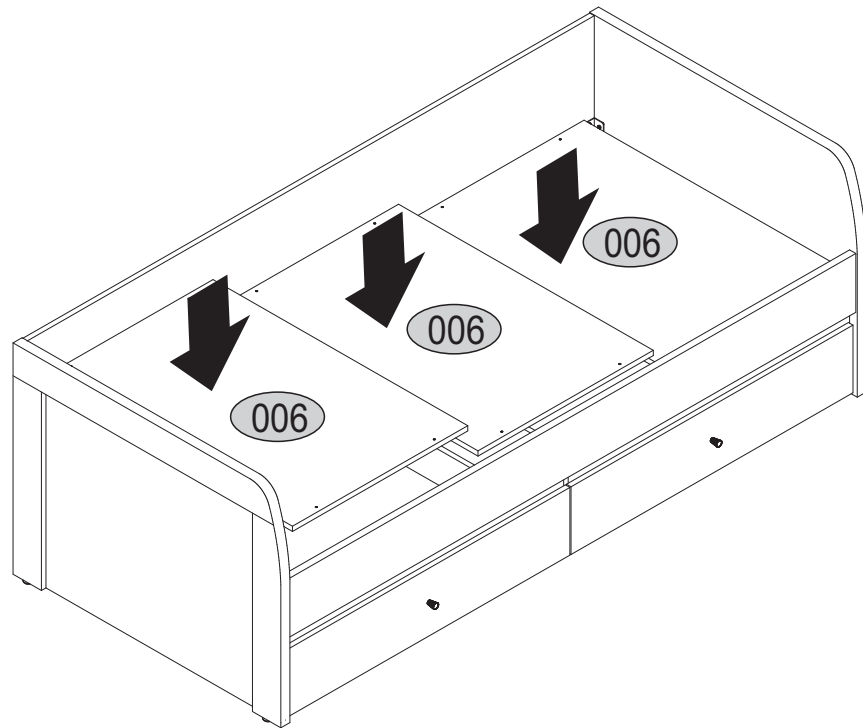

15

p21
x12

