

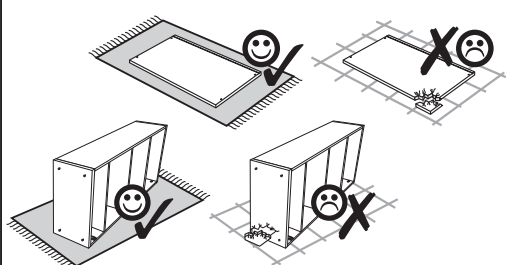
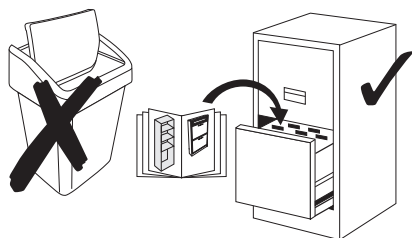
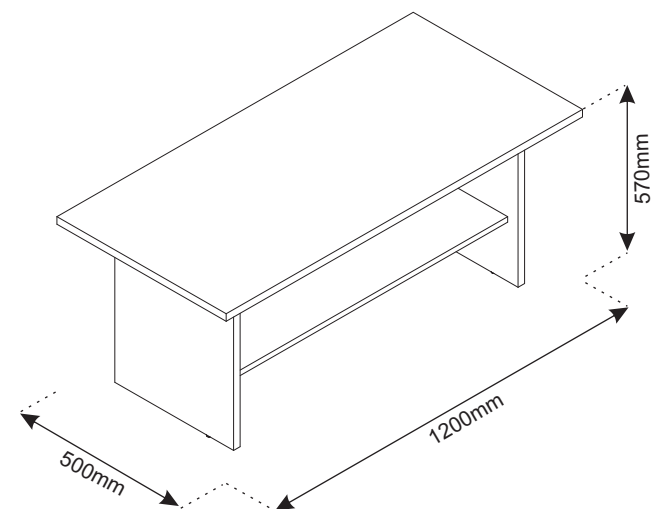
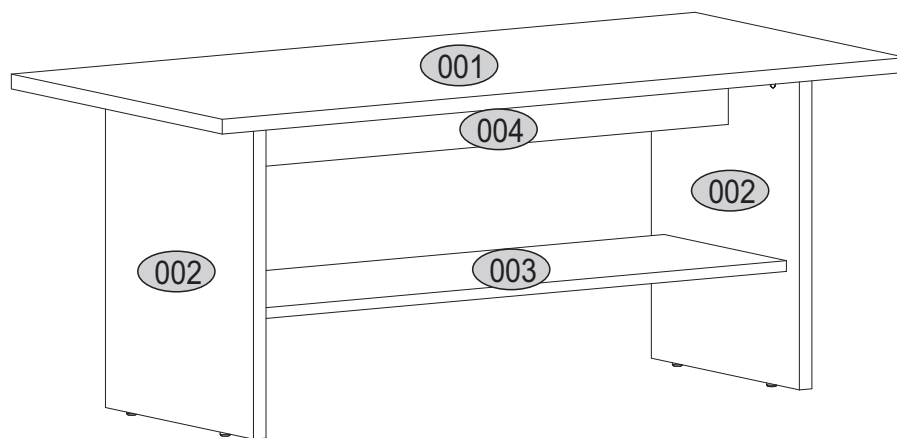


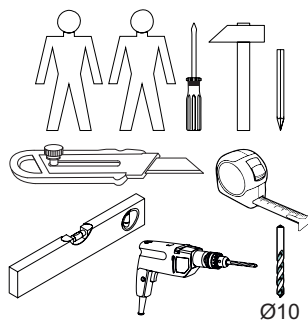

Instrukcja montażowa


KARIN Ława 120






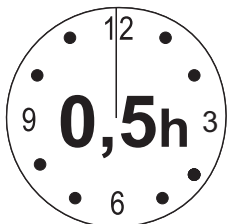


Kod	Wymiary			Pakiet	
001	1200	570	22	1	1/1
002	472	400	22	2	1/1
003	936	330	16	1	1/1
004	936	100	16	1	1/1
Akcesoria				1	1/1

Aksesoria:


<p>10x f1 Ø8x30</p> 	<p>8x r1 15x12</p> 	<p>12x r16 Ø5x24</p> 	<p>4x r3 Ø15x15</p> 
<p>12x s2</p> 	<p>1x z1</p> 	<p>4x k1</p> 	

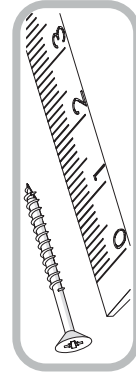

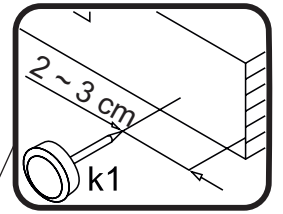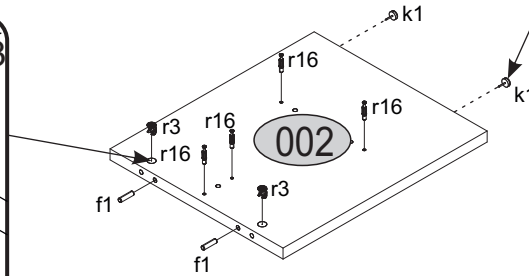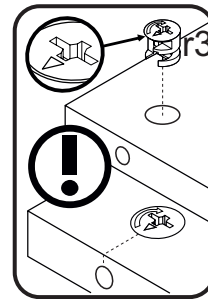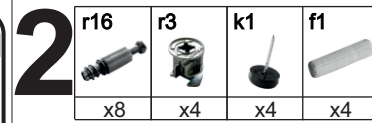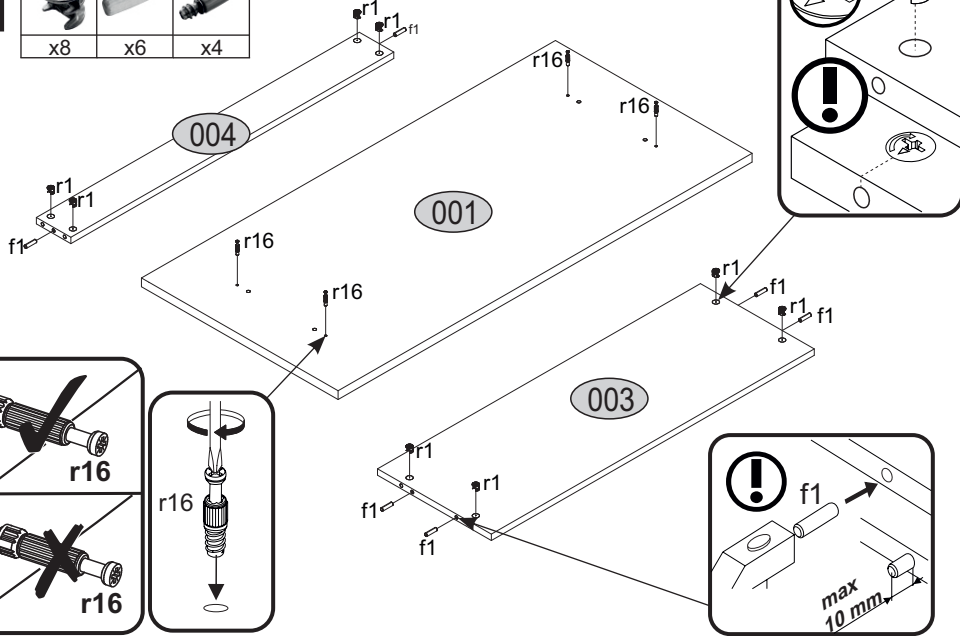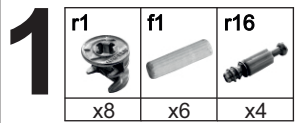


x2

3

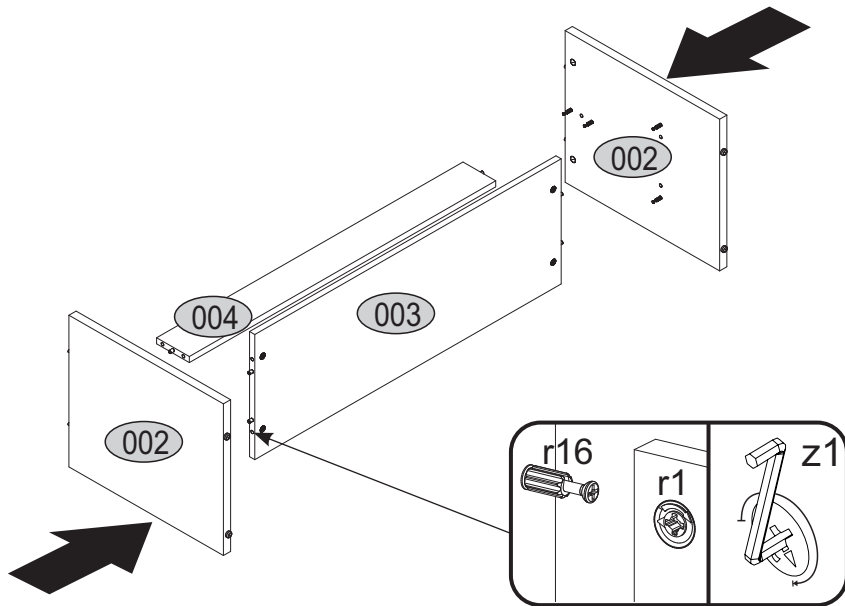

4

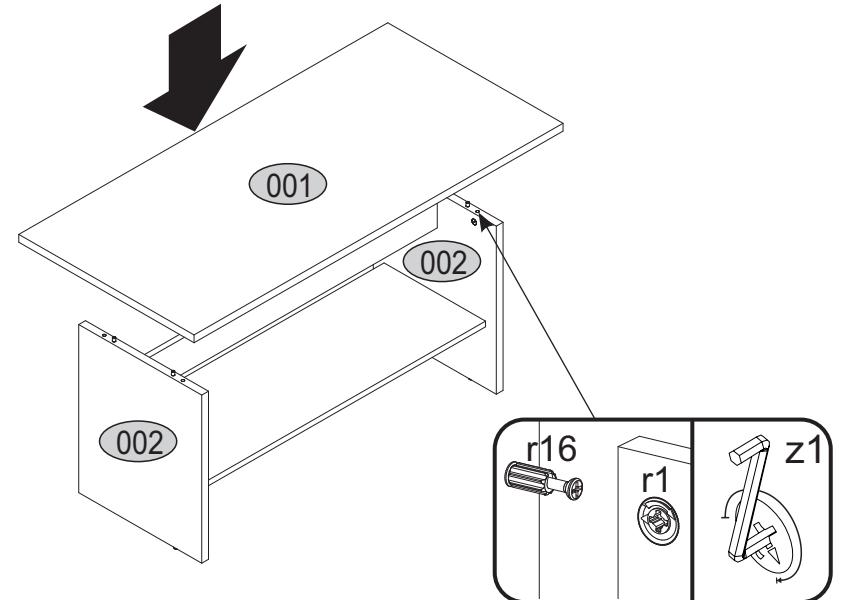

5

s2



x12

