






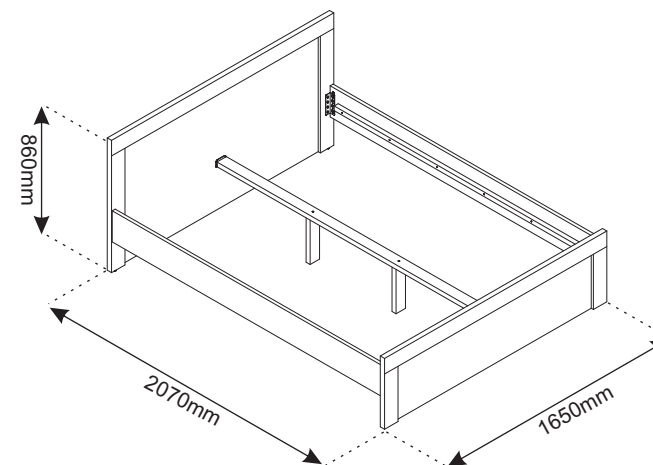


# Instrukcja montażowa

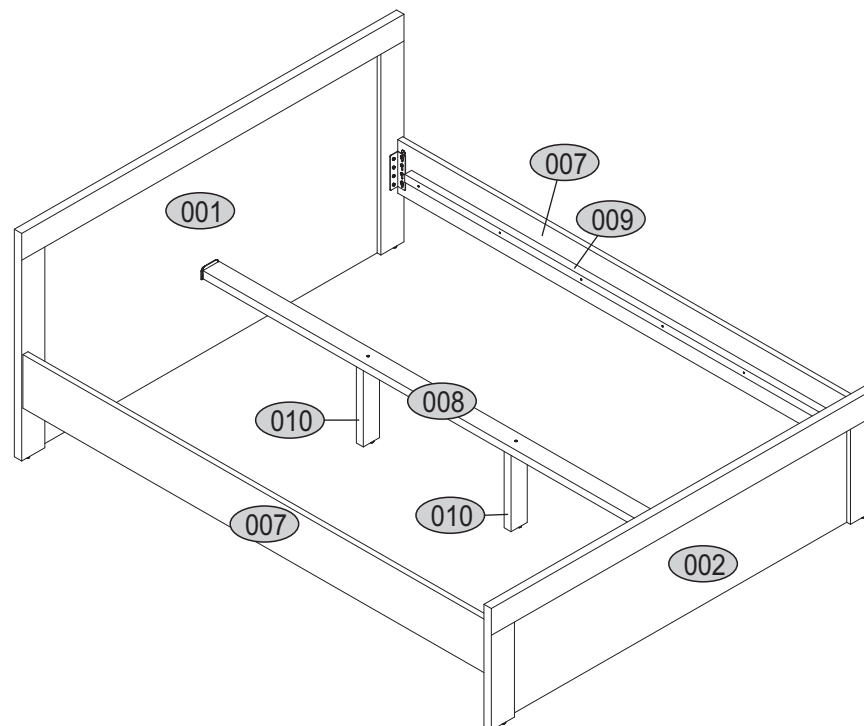

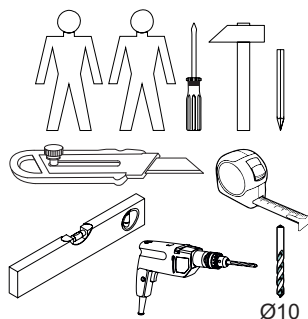

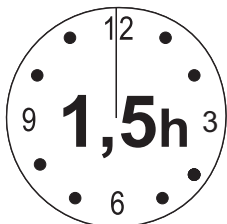

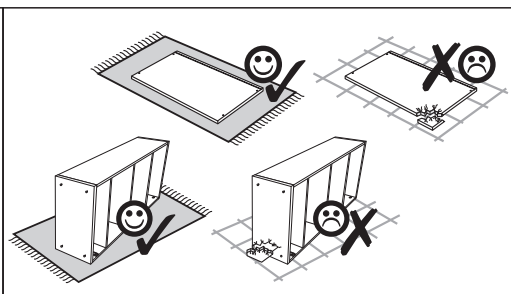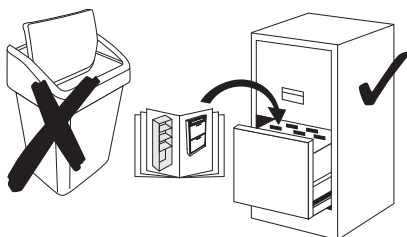






## KARIN Łoże 160\*200








| Kod       | Wymiary |         |          | Pakiet |     |
|-----------|---------|---------|----------|--------|-----|
|           | Wzrost  | Grubość | Wysokość |        |     |
| 001       | 1654    | 850     | 16/32    | 1      | 2/3 |
| 002       | 1654    | 455     | 16/32    | 1      | 3/3 |
| 007       | 2000    | 200     | 22       | 2      | 1/3 |
| 008       | 2000    | 70      | 30       | 1      | 1/3 |
| 009       | 1880    | 27      | 30       | 2      | 1/3 |
| 010       | 285     | 70      | 30       | 2      | 1/3 |
| Akcesoria |         |         |          | 1      | 1/3 |




# Aksesoria:

|  |  |   |  |
|--|--|---|--|
| <p>4x<br/>n63</p>             | <p>2x<br/>n34<sup>1</sup></p>  | <p>2x<br/>n34<sup>2</sup></p>  | <p>6x<br/>k1</p>                |
| <p>2x<br/>e27</p>             | <p>8x<br/>r3</p>               | <p>12x<br/>p10<br/>Ø4x40</p>   | <p>16x<br/>p25<br/>Ø3.5x16</p>  |
| <p>8x<br/>e3<br/>Ø6.3x13</p>  | <p>8x<br/>r16</p>              | <p>12x<br/>f1<br/>Ø8x30</p>    | <p>32x<br/>e2<br/>Ø6.3x13</p>   |
| <p>6x<br/>p36<br/>Ø4x25</p>   | <p>4x<br/>n221</p>              | <p>1x<br/>z1</p>               | <p>12x<br/>p21<br/>Ø4x30</p>    |

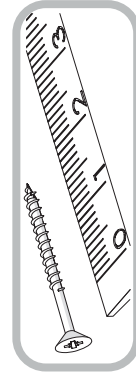


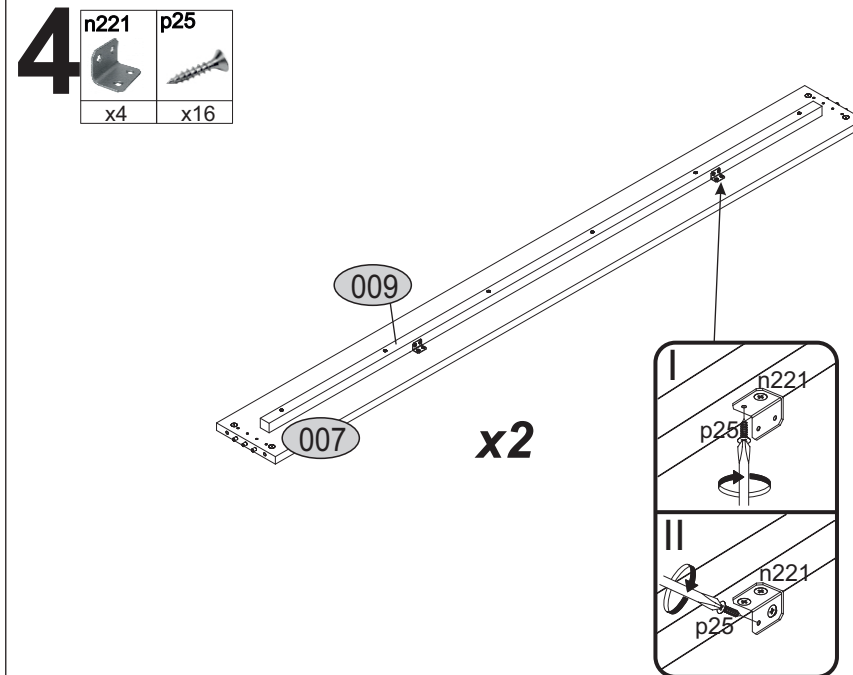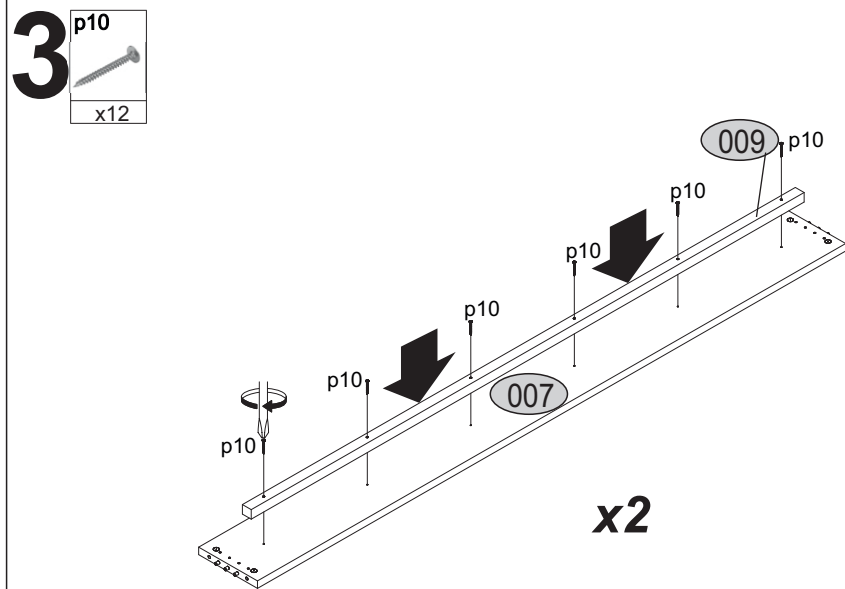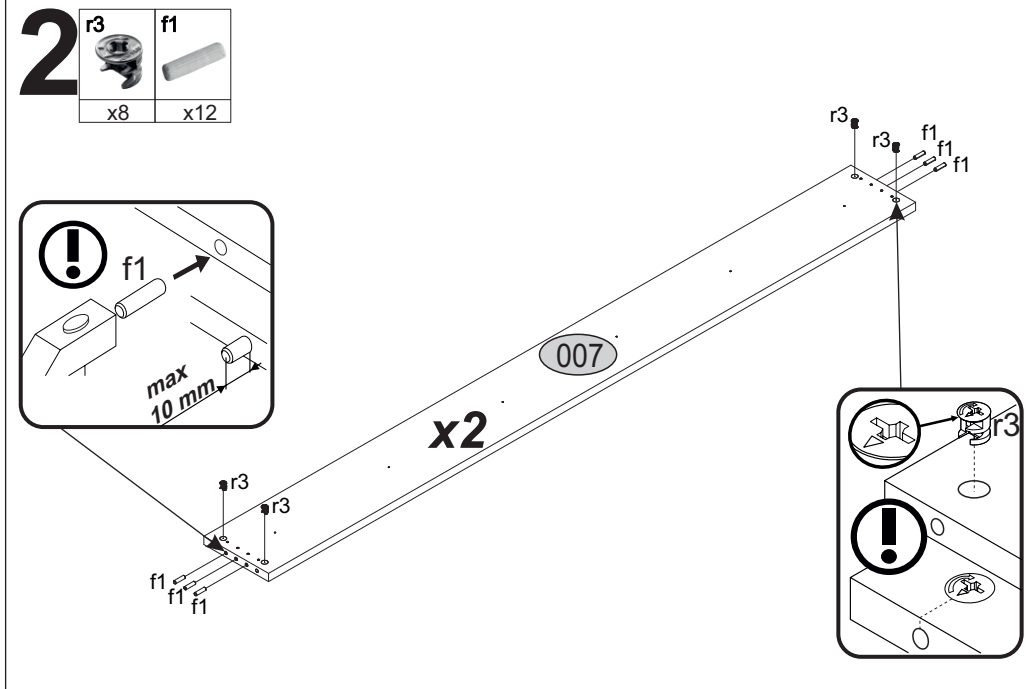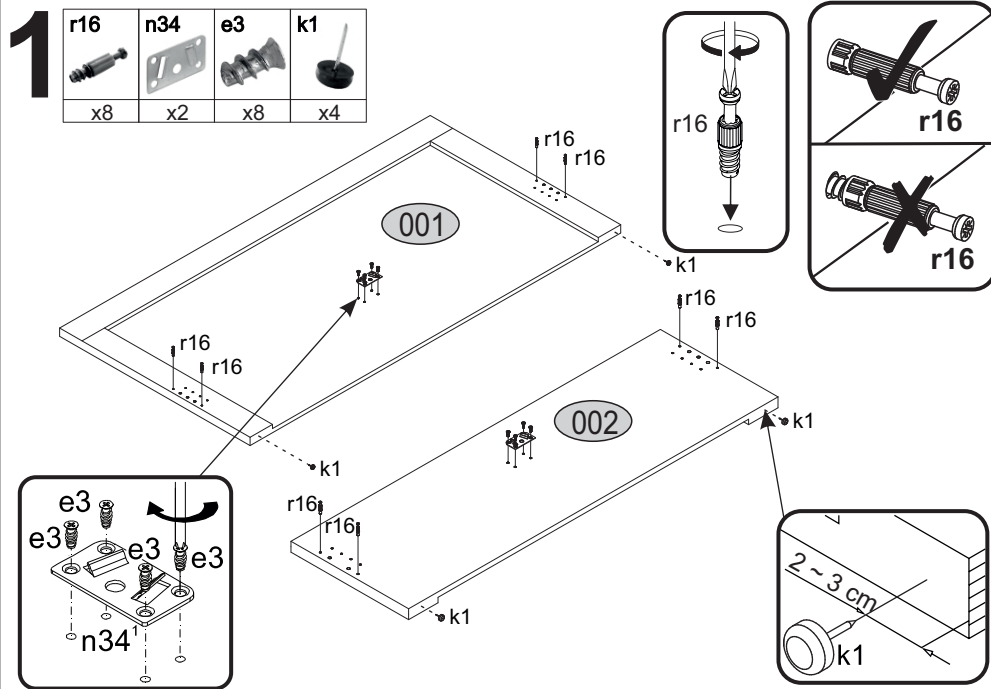


# 5

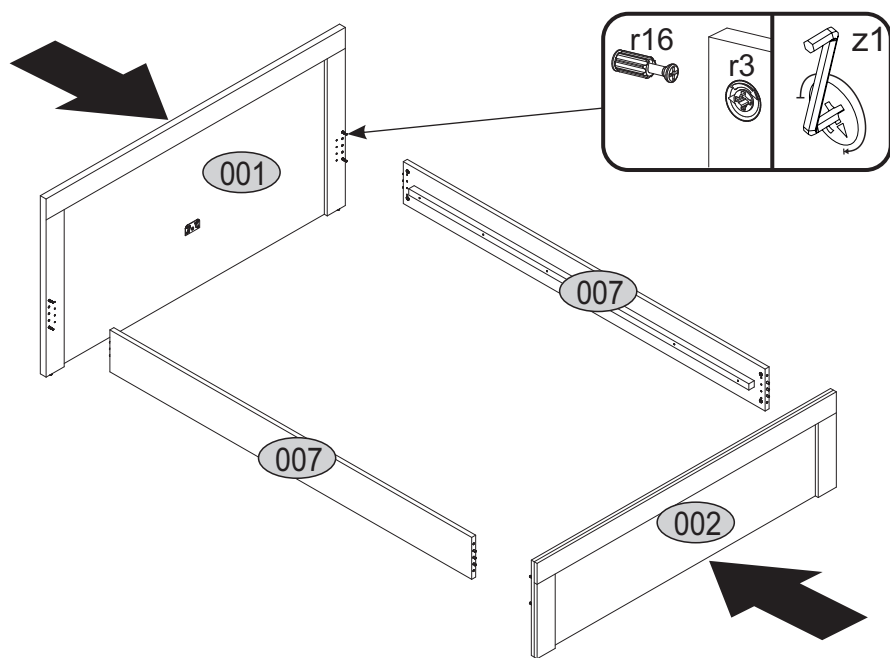


# 6

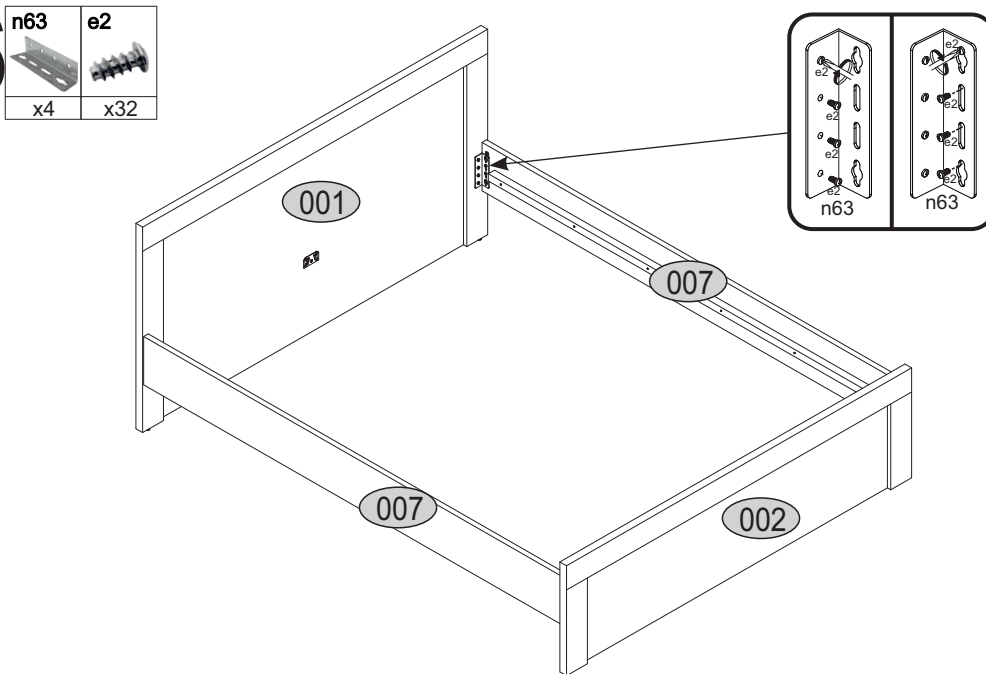

# 7

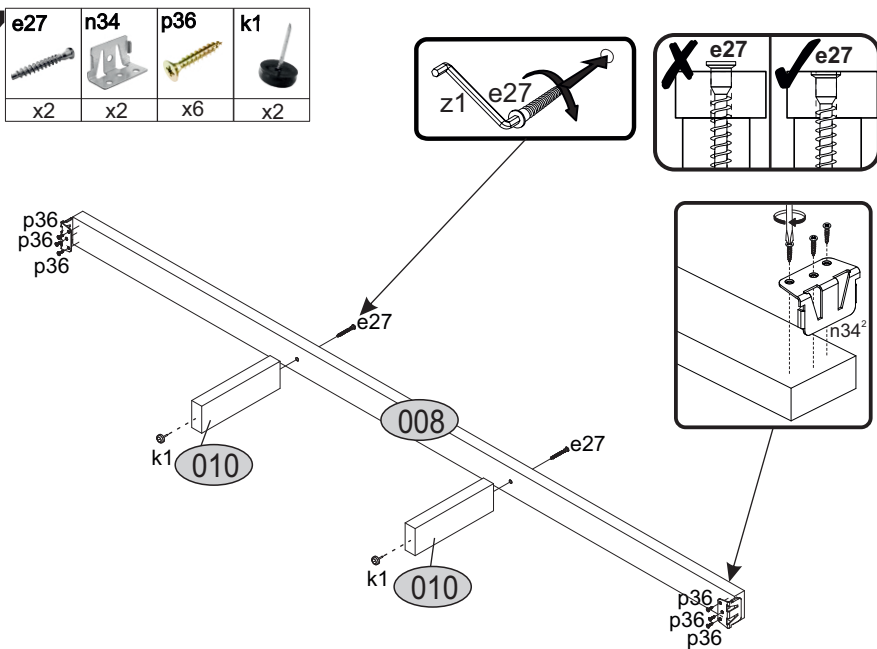

# 8

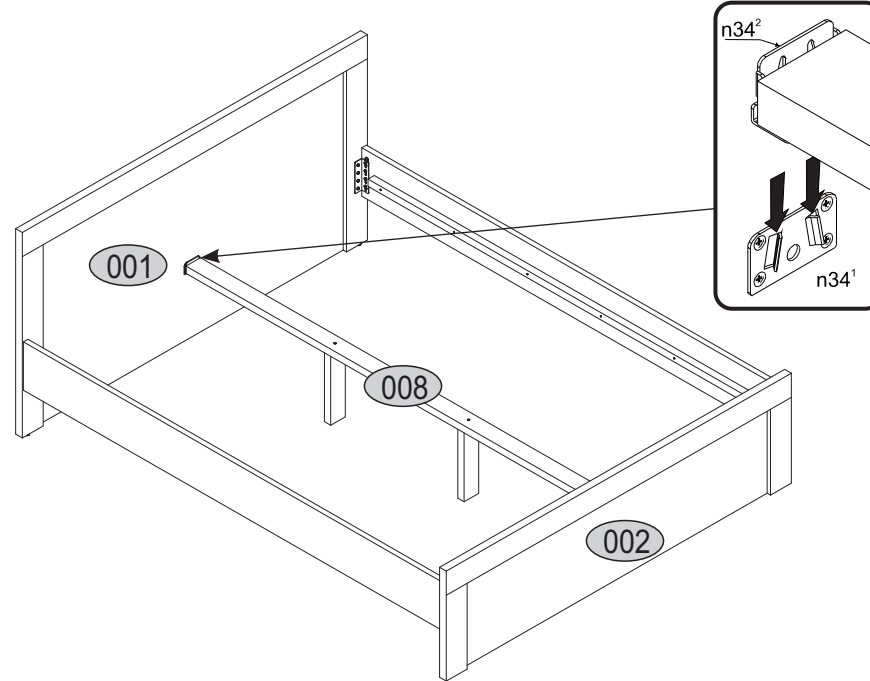

9

p21



x12

